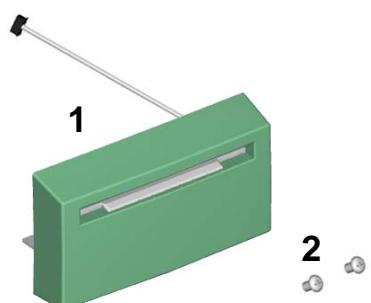
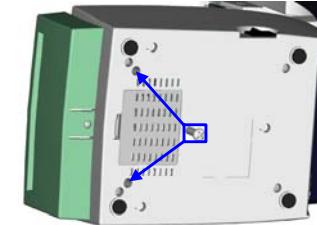
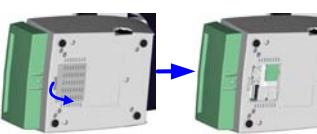
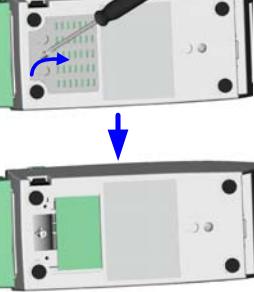
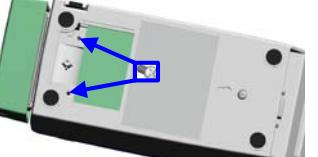
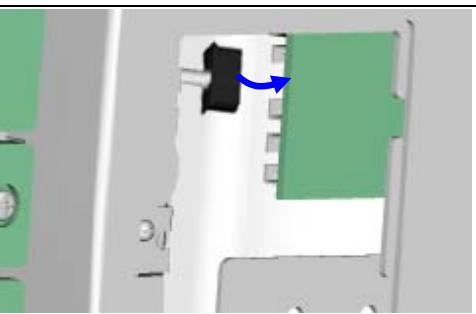
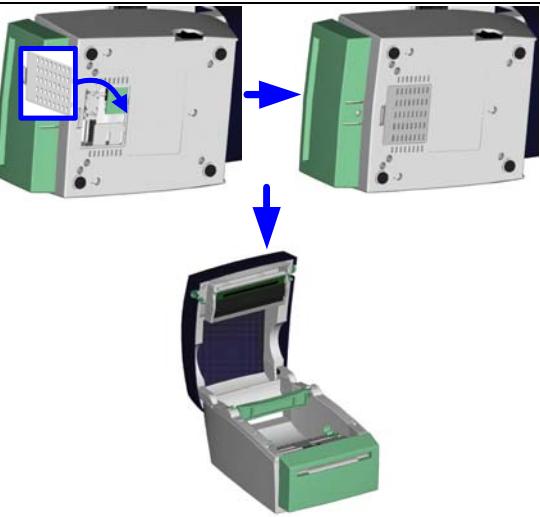
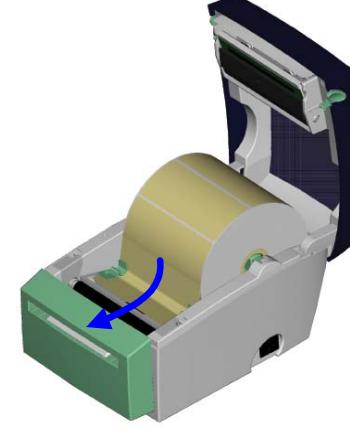
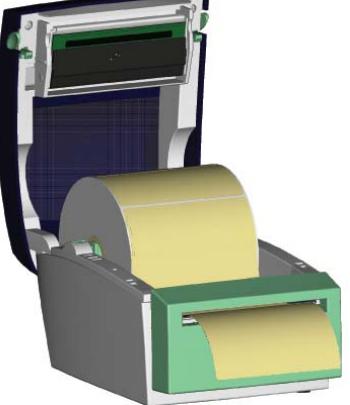


EZ-DT-2 / EZ-DT-4 Cutter Installation

1 Cutter Module	
2 Screw x 2pcs	
<p>[Note1] Please power off the printer before installing the cutter module.</p> <p>[Note2] Do not cut self-adhesive labels! The traces of adhesive will pollute the rotary knife and impair safe operation! The service life of the cutter is 1,000,000 cuts for paper weights up to $120\text{g}/\text{m}^2$, and 500,000 cuts for paper weights $120\text{g}/\text{m}^2$ to $170\text{g}/\text{m}^2$.</p> <p>[Note3] The max paper cutting width is 114mm</p>	
	<p>[Note4] The label / paper that used for cutting is suggested to be at least 30mm (for DT-4) and 40mm (for DT-2) in height.</p>
1. Place the printer on a horizontal surface and open the Top Cover.	
2. Remove the Front Cover Piece.	
3. Push the Cutter connector into printer through the cable hole as shown in figure.	
4. Place the Stripper on the fillister.	
EZ-DT-4	
5. Turn the printer around and tighten screws to fix the Cutter in location.	
6. Unlock the Bottom Case Cover to see the main board of printer.	
EZ-DT-2	
5. Loose the screw of Bottom Case Cover and open it.	
6. Tighten the screws to fix the Cutter in location.	

7. Plug the connector into the main board.	
<p>[Note] Before plugging the connector into socket, please check the pin first.</p>	
8. Lock the Bottom Case Cover. (For EZ-DT-2, please tighten the screw of Bottom Case Cover)	
9. Turn the printer back to proceed the label installation.	
10. Follow the instruction on User manual to install the label.	
<p>[Note] It is not suggested to use label-inside paper when printing with cutter module.</p>	
11. Feed the label through the Cutter and press the FEED key to complete the installation.	
<p>[Suggestion] When printing with cutter module, it is suggested to set the stop position (^E) to 33 (for DT-4) and 29 (for DT-2).</p>	