

- WD200 Wearable Terminal -



Product View

Package

Please make sure the following contents are in the WD200 gift box. If something is missing or damaged, please contact your unitech representative.

The package contents

- WD200
- USB 3.0 Type C Cable
- Quick Start Guide

Optional accessories

- 4 slot cradle
- Ring Scanner
- EZ Lock arm strap Holder
- Wrist Holder
- Necklace Holder
- Belt Holder

Quick Start Guide

608901G V1.2



1	Power Key	7	Pogo pin
2	Camera & LED Flash Light	8	USB Type C Port
3	Programmable Button / Camera Button	9	Touch Panel
4	SIM Card Slot	10	Δ : Back Button
			O : Home Button
			: Recent Button
5	LED Light	11	Microphone Holes
6	Speaker		



Charging the battery

Connect the USB cable to the USB port on WD200 and connect the other end to an AC power adapter. We recommend only the USB cable that comes with the WD200, or a unitech designed cradle, to charge the WD200.

The LED indicator on WD200 is red when charging and is green when fully charged.





Inserting a Nano SIM Card

- 1. Remove the one screw on the Nano SIM card slot cover with a screwdriver. Remove the cover.
- 2. Insert the SIM card.
- Push the card into the slot until you feel the card click into place.
- 4. Put the cover back into place and replace the screw.



Checking LED Status

LED	Description	
Red Light	 Battery Charging 	
	 Twinkling to indicate battery 	
	low status(less than 15%)	
Green Light	 Battery Fully charged 	
	Barcode scan good read	
Blue Light	Message	
No LED (Red and Green) display when battery is out(even		

WARNING!

DO NOT force opening the battery cover and attempting to change the battery as you may damage the product and the battery, it is built-in and is not user changeable. Any batteries inappropriate use could result in damage or safety issues such as catching fire, or malfunctioning the sensitive components. unitech reserves the right and disclaims any liability as a result of any damages caused by ignoring this warning. To avoid any consequential damages,

please contact a unitech representative before removing the battery.

WARNING!

There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. DO NOT attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in vour area.

CAUTION!

- To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.
- If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.

For other product documentation, please scan the QR code below for more information.

