

# EA530 Series

## Rugged Smartphone



### Quick Start Guide

401780G V1.1

### ► Package

Please make sure the following contents are in the EA530 gift box. If something is missing or damaged, please contact your Unitech representative.

### ► The Package Contents

- EA530 Rugged Smartphone
- Battery
- USB-C Cable
- Quick Start Guide

### ► Optional Accessories

- Power Adapter (with US / EU / UK / AU plug)
- Stylus (5.5mm)
- Hand Strap
- Coiled Strap
- Screen Protector
- Gun Grip
- Single Slot Charging Cradle
- Single Slot USB / Ethernet Cradle

### ► Product View



**Note:**  
Please remove the black film while using gun grip.

1. Barcode Scanner Window
2. Receiver
3. LED Indicator
4. Front Camera
5. Volume Key
6. Scanner Trigger Key

7. Power Button
8. Programmable Key
9. Rear Camera
10. Hand Strap Attachment Point
11. NFC

12. Speaker
13. Microphone (sub)
14. UHF (Only for EA530 UHF)
15. Pogo Pin for Gun Grip
16. Battery Release Latch
17. Battery

18. USB-C Port
19. Microphone (main)
20. Pogo Pin for Cradle
21. Hand Strap Attachment Point

## ▶ Install the Battery

1. Grasp the battery release latch at the two grooves, then align the battery with the battery slot and insert it from the bottom.



2. Once the battery is fully seated in the slot, release the battery release latch. Make sure the battery remains securely locked in place.



## ▶ Remove the Battery


Grasp the battery release latch from the two grooves and gently lift it upward.



## ▶ Charging the Battery

For regular use, the terminal can be fully charged within 4 hours. We highly recommend using the original adapter. Connect the USB-C cable to the USB port on the EA530, and plug the other end of the USB cable into the AC power adapter. Then, insert the AC power adapter into the electrical outlet.

When the EA530 is charging, the LED indicator will turn red. Once the battery is fully charged, the LED indicator will turn green.

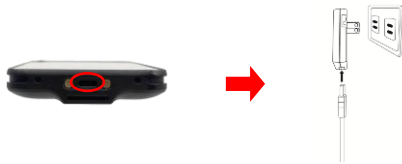

## ▶ Checking LED Status

LED	Description
<b>Red Light</b>	<ul style="list-style-type: none"><li>• Battery Charging</li><li>• Battery Low when Flashing (Less Than 15%)</li></ul>
<b>Green Light</b>	<ul style="list-style-type: none"><li>• Battery Fully Charged</li><li>• Barcode Scan Good Read</li></ul>
<b>Blue Light</b>	<ul style="list-style-type: none"><li>• Message</li></ul>

When the Scanner App is running, the LED is controlled by the app. There will be no LED display (neither Red nor Green) when the battery is depleted, even when connected to AC power.

## ▶ Checking Battery Status

If the battery power becomes low during normal use, a status icon will appear on the device screen indicating a low or very low battery status. In either case, please back up your data and recharge your device as soon as possible.

### WARNING!

There is a risk of fire and burns if the battery is handled improperly. **DO NOT** disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. **DO NOT** attempt to open or service the battery. Dispose used batteries according to local recycling guidelines in your area.

### CAUTION!

To ensure the unit working properly, please keep all connectors away from the contaminants such as dust, grease, mud, and water. Negligence may cause the unit to lose communication, short circuit, or overheated. If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuit.

**DO** charge between 20% and 80% to protect your battery.

**Avoid** full discharges (<0%) or charging all the time (always 100%) to reduce stress on the battery.

### EU Importer:

Unique Technology Europe B.V.  
Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands

Copyright 2025 Unitech Electronics Co., Ltd. All rights reserved.  
Unitech is a registered trademark of Unitech Electronics Co., Ltd.

Google, Google Play, YouTube, Google Chrome  
and other marks are trademarks of Google LLC.



<http://www.ute.com/>