

 **DATALOGIC**

JOYA A6
Touch

Multi-Purpose Device for Retail



User's Manual

Datalogic S.r.l.

Via San Vitalino 13
40012 Calderara di Reno (BO)
Italy
Tel. +39 051 3147011
Fax +39 051 3147205

©2019 Datalogic S.p.A. and/or its affiliates

♦ All rights reserved. ♦ Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates. Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation. Should future revisions of this manual be published, you can acquire printed versions by contacting your Datalogic representative. Electronic versions may either be downloadable from the Datalogic website (www.datalogic.com) or provided on appropriate media. If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact Datalogic" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic reserves the right to change any specification at any time without prior notice. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. The Joya logo is a trademark of Datalogic S.p.A. and/or its affiliates, registered in the U.S. and the E.U. All other trademarks and brands are property of their respective owners.

Patents

Patent. See www.patents.datalogic.com for patent list.



Table of Contents

Introduction	1
Conventions	1
Product Presentation	2
Available Models	3
Out of the Box	7
General View	8
Front View	8
Back View	9
Top View	10
Side View	10
Accessories	12
Battery	15
Install the Battery	15
Charge the Battery	17
Charge with the Single Slot Dock Charge Only	17
Charge with the Single Slot Dock Locking	18
Charge with the 3-Slot Cradle	21
Charge with USB	25
Battery Information	26
Battery Safety Guidelines	28
Getting Started	31
Turn on the Device	31
Home Screen	31
Home Screen Items	32
Status Bar Icons	33

Power Menu	34
Suspend	35
Power Off	35
Reboot	36
Ship Mode	36
Long Press Power Menu	37
Take Screenshot	37
Adjust Volume	37
Re-scan Filesystem	37
Pair Device	38
Quick Settings Menu	41
Applications	42
Touch Gestures	46
Using the Stylus Pen	46
Resetting the Device	47
Configuration Reset	47
Device Reset	49
LED Indicators	51
Magnetic Sensor Calibration	52
Settings	53
Overview	53
Wi-Fi Settings	54
Connect to Wi-Fi Network	54
Add a Wi-Fi Network	56
Bluetooth Settings	58
Enable Bluetooth®	58
Connect to Other Bluetooth@ Devices	59
Configure, Rename or Unpair Bluetooth@ Devices	60
Led Notifications	62
Scanner Settings	66
Notification	67

Good Read	69
Formatting	70
Scanner Options	73
Wedge	77
Symbology Settings	79
Global Settings	81
System Upgrade	82
Local Upgrade	82
Recovery Mode	86
Advanced Settings	88
Suspend Timeout	88
Charging Mode	90
Cradle Update	90
Wake-Up Configuration	91
Low Power Options	92
Input Configuration	93
Datalogic Applications	103
DL Battery Manager	103
Battery Info	105
Charging Profile	109
Data Logging	111
Application	115
DL Cradle Manager	117
Auto Calibration	119
Firmware Update	119
Get Slot Failure	120
Settings	120
DL Ringtone Editor	124
DL Stager	127
Desktop Configuration Utility (DXU)	128
Led Effects Editor	129

ProximityCalibrate	131
Scan2Deploy	132
SoftSpot™	133
Tools	137
USB ADB Driver & USB CD-ROM	137
SDK Add-on	138
Install ADB Driver	138
Create a New Application with Android Studio	140
Datalogic SDK	140
Avalanche	141
CSIPSimple	141
SureLock	142
SureFox	142
MobiControl	143
Data Capture.....	145
Imager Data Capture	145
Connections	149
USB Connection	149
USB Direct Connection	149
Wi-Fi Connection	151
Bluetooth® Serial Connection	153
Wireless and Radio Frequencies Warnings	155
Technical Features	159
Technical Data	159
Test Codes.....	165
Maintenance.....	173
Cleaning the Device	173
Ergonomic Recommendations	174
Safety and Regulatory Information	175
General Safety Rules	175
Power Supply	176

Laser Safety	176
LED Class	185
Marking and European Economic Area (EEA)	185
Simplified EU Declaration of Conformity	186
Statement of Compliance	186
Information for the User	188
Radiofrequency Radiation Exposure Information	189
Radio Technologies and Frequency Bands	190
Europe	190
US and Canada	190
FCC/IC Labeling	191
FCC Compliance	191
ISED Compliance	192
Radiofrequency Radiation Exposure Information	193
WEEE Compliance	195
Support Through the Website.....	197
Reference Documentation	197
Warranty Terms and Conditions	197
Glossary.....	199

NOTES



Introduction

Conventions

This manual uses the following conventions:

"Device" and "Joya Touch A6" refer to the Joya Touch A6.

"Dock" refers to the Joya Touch Single Slot Dock Locking.

"3-Slot Cradle" refers to the Joya Touch 3-Slot Cradle.

The label artworks may be only a draft. Refer to the product labels for more precise information.

Product Presentation

The Datalogic Joya Touch A6 is a pocket-sized Android™ 7.1 powered mobile computer, available in two form factors. This compact, lightweight, and versatile device, combines fully integrated automatic data capture (2D barcode), a wireless charging system and wireless communication capabilities, supporting nearly any application. The Datalogic Joya Touch A6 system architecture is based on Qualcomm Snapdragon 210 platform and it was developed to meet the most demanding customer needs. A large quantity of on-board memory is available and it enables the user to adapt the terminal for any specific need. Thanks to its great ergonomics and the state of the art architecture, the Datalogic Joya Touch A6 is the right answer to enhance your business opportunities.

Available Models

The Datalogic Joya Touch A6 is available in different models depending on the features it is equipped with. All options are listed below.

EU models:

- 911350036 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Grey/Blue/Blue, EU - colors combination (upper case / battery cover / trigger).
- 911350037 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Grey/Blue, EU - colors combination (upper case / battery cover).
- 911350055 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Dark Grey/Orange/Orange, EU
- 911350056 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Dark Grey/Orange, EU
- 911350057 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, White/Green/Green, HC, EU
- 911350058 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP,

Presentation mode, Android6, 2GB RAM/16 GB Flash, White/Green, HC, EU

- 911350040 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D Imager w/ red illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Grey/Blue/Blue, EU
- 911350041 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D Imager w/ red illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Grey/Blue, EU
- 911350059 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D Imager w/ red illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Dark Grey/Orange/Orange, EU
- 911350060 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D Imager w/ red illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Dark Grey/Orange, EU
- 911350099 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D MegaPixel Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android7.1, 2GB RAM/16 GB Flash, Grey/Blue/Blue, EU - colors combination (upper case / battery cover/ trigger).
- 911350100 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D MegaPixel Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android7.1, 2GB RAM/16 GB Flash, Grey/Blue EU - colors combination (upper case / battery cover).

North America models:

- 911350061 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Grey/Blue/Blue, FCC
- 911350062 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Grey/Blue, FCC
- 911350063 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Dark Grey/Orange/Orange, FCC
- 911350064 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Dark Grey/Orange, FCC
- 911350065 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, White/Green/Green, HC, FCC
- 911350066 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, White/Green, HC, FCC
- 911350067 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D Imager w/ red illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Grey/Blue/Blue, FCC

- 911350068 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D Imager w/ red illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Grey/Blue, FCC
- 911350069 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D Imager w/ red illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Dark Grey/Orange/Orange, FCC
- 911350070 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D Imager w/ red illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android6, 2GB RAM/16 GB Flash, Dark Grey/Orange, FCC
- 911350101 Joya Touch A6 Pistol-Grip, 802.11 a/b/g/n, BT 4, 2D MegaPixel Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android7.1, 2GB RAM/16 GB Flash, Grey/Blue/Blue, FCC - colors combination (upper case / battery cover / trigger).
- 911350102 Joya Touch A6 Handheld, 802.11 a/b/g/n, BT 4, 2D MegaPixel Imager w/ white illum. & Green Spot, 4.3" Full Touch, VoIP, Presentation mode, Android7.1, 2GB RAM/16 GB Flash, Grey/Blue FCC - colors combination (upper case / battery cover).

For further details about the Datalogic Joya Touch A6 models refer to the web site: www.datalogic.com.

Out of the Box

The Joya Touch A6 package contains:

- Joya Touch A6 (device)
- Rechargeable battery
- Quick Start Guide
- Safety & Regulatory Addendum

Remove all the components from their packaging; check their integrity and compare them with all the packing documents.



CAUTION

Keep the original packaging for use when sending products to the technical assistance center. Damage caused by improper packaging is not covered under the warranty.

General View


Front View



Back View




Top View

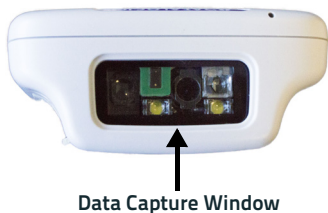

Side View

Handheld Models

Pistol Grip Models

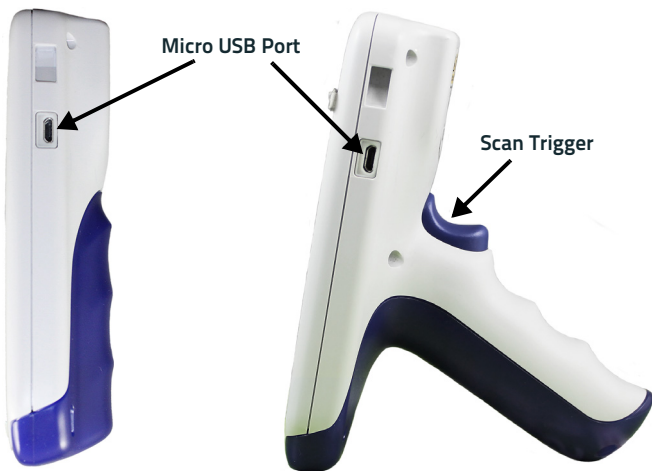



CAUTION

Do not apply any sticker to the Joya Touch A6 (see the picture below).



Accessories

Cradles

- 91ACC0043 Joya Touch 3-Slot Cradle for Wall Mounting; requires power supply, line cord and wall bracket.
- 91ACC0069 Joya Touch 3-Slot Cradle for General Purpose. It contains 1 unlocking key and 1 pair of desktop feet; requires power supply and line cord.
- 91ACC0072 Joya Touch Single slot cradle, locking (light gray); requires a power supply (91ACC0048) and line cord.
- 91ACC0073 Joya Touch Single slot cradle, charge only (light gray); power supply and line cord included.

Cradles Accessories

- 91ACC0045 Joya Touch Cradle Unlock Key (5 PCS).
- 91ACC0048 Joya Touch 3-Slot Cradle and Single Slot Dock Power Supply; requires line cord (for 3-SC powers up to 2 cradles in standard charge mode and 1 cradle in fast charge mode).
- 91ACC0049 Joya Touch 3-Slot Cradle Power Jumper to connect a second 3-slot cradle to a single power supply (5 pcs).
- 91ACC0050 Joya Touch 3-Slot Cradle Wall Bracket; supports both mounting orientations.
- 91ACC0068 Joya Touch 3-Slot Cradle Desktop Feet (1 pair to retrofit wall mount cradle).

Batteries

- 91ACC0055 Joya Touch Battery (1 pc).


Cables

- 94A051968 Cable, MicroUSB, client.

95ACC1113	Power cord, 3-PIN IEC C13, USA.
95ACC1213	Power cord, 3-PIN IEC C13, UK.
95A051041	Power cord, 3-PIN IEC C13, EU.
95ACC1215	Power cord, 3-PIN IEC C13, Australia.

Various

91ACC0036	Lanyard, Joya Touch (5 pcs).
91ACC0046	Joya Touch Screen Protectors, anti-fingerprint, transparent border (5 pcs).
91ACC0079	Joya Touch Handheld Rubber Boot (for WEC7 models and A6 models).
91ACC0085	Joya Touch Pistol Grip Rubber Boot (for WEC7 models and A6 models).
91ACC0080	Joya Touch Belt Holster.
91ACC0047	Joya Touch Trolley Holder (60 pcs) – for both handheld and pistol grip.
91ACC0086	Joya Touch Trolley Holder (60 pcs) – pistol grip only, display orientation 45 degrees.



NOTE

Use only Datalogic-approved power supply and cables. Use of an alternative power supply will invalidate any approval given to this device and may be dangerous.

NOTES



Battery

Install the Battery

To install the battery pack, follow the steps below:

1. Unscrew the battery cover and remove it:



Handheld Models



Pistol Grip Models

2. Connect the battery contacts to the battery clip located in the battery slot:



Handheld Models



Pistol Grip Models

3. Insert the battery pack into the slot as shown in the figures below:



Handheld Models



Pistol Grip Models


4. Insert the battery cover and fix the screws:



Handheld Models



Pistol Grip Models



Required torque of the screws is 35 Ncm.


NOTE

Charge the Battery

The Joya Touch A6 battery pack is not initially fully charged. After installing the battery, charge it with the single slot dock charge only, the single slot dock locking, the 3-slot cradle or a USB cable.

Charge with the Single Slot Dock Charge Only

To prevent the risk of short-circuiting, first plug the power supply into the power jack on the back of the dock, then plug the power supply into a power outlet.

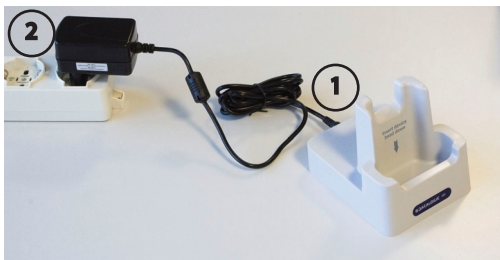

CAUTION

Use only the Datalogic power supply included in the box to power the Joya Touch Single Slot Dock Charge Only.




NOTE

Insert the device into the dock with the screen facing front and the head facing down.

Charge with the Single Slot Dock Locking

To prevent the risk of short-circuiting, first plug the power cord into the power connector on the back of the dock, then connect the power cord to the power supply.

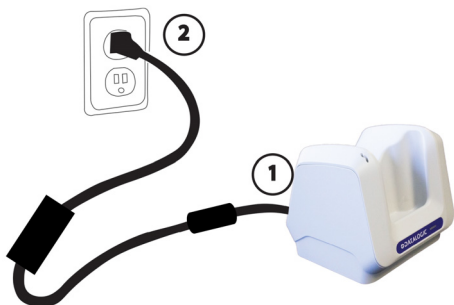

CAUTION

Use only the Datalogic power supply 91ACC0048 to power the Joya Touch Single Slot Dock Locking.

The Single Slot Dock Locking cannot be daisy-chained to a Joya Touch 3-Slot Cradle.



NOTE

Insert the device into the dock with the screen facing front and the head facing down.




NOTE

The Single Slot Dock Locking can be unlocked using the unlock key provided with the cradle or by software sending an unlock command from the inserted device. See the Single Slot Dock Locking Quick Start Guide for further details.

Single Slot Dock Locking LED Indicators

LED	Status
Power On (Green LED)	
Solid green for 3 seconds	Dock bootstrap: cradle application started.
Short blink every few seconds	Dock standby (if the standby LED is enabled): the dock is powered and ready, no device inserted. You can enable/disable the standby LED feature from DL Cradle Manager.
Off	Dock standby (if the standby LED is disabled): the dock is powered and ready, no device inserted. You can enable/disable the standby LED feature from DL Cradle Manager.
Battery Charger LED (Bicolor Green/Red LED)	
Off	Device not charging or not inserted (see above).
Solid red	Device is charging.
Solid green	Device charging completed.
Maintenance LED (Red LED)	
Blink red, 1 quick pulse	Cradle not calibrated. Solution: perform an "auto calibration" from DL Cradle Manager. Ensure that levers are free to move.
Blink red, 2 quick pulses	Lever wrong position. It is open but it should be closed or vice versa. Solution: restore the lever position (e.g.remove the mechanical key from the slot).

LED	Status
Maintenance LED (Red LED) - Continued	
Blink red, 3 quick pulses	FOD (Foreign Object Detection). It's a WLC error related to metallic parts between transmitter and receiver coils. The power transfer is suspended. Solution: remove the device from the cradle, then remove the metallic part causing the problem.
Blink red, 4 quick pulses	EOC (end of charge) timeout error. The WLC EOC signal has been kept enabled by the terminal for too much time. Typically, it is caused by a bug in the terminal firmware. The power transfer is disabled.
Blink red, 5 quick pulses	WLC generic error. The WLC system seems unstable and unable to setup a stable power transfer within a reasonable time. The power transfer is suspended. Solution: try to extract the device from the cradle and to re-insert it again.
Blink red, 6 quick pulses	Device charging error.
Solid red	Firmware upgrade.



For further information on the Joya Touch Single Slot Dock Locking, refer to the Single Slot Dock Locking Quick Start Guide, included in the dock's box.

Charge with the 3-Slot Cradle

There are two options to connect the cradle to the power supply: fast charge and standard charge.

Fast Charge

The fast charge connection allows to power one cradle with one power supply.

Plug the power supply cable into the power connector on the back of the cradle, then plug the power supply into the AC/DC plug using a Datalogic power cable.

Please see below an example of how to insert the power supply cable through the wall mounting metal bracket:



High Visibility




High Density

Standard Charge

The standard charge connection allows to power two cradles with one power supply. To connect a second cradle use the Joya Touch Cradle Power Jumper, available as optional accessory (P/N 91ACC0049).

1. Connect the first cradle to the second cradle using the power jumper.
2. Connect the power supply to the first cradle.

3. Plug the power supply into the AC/DC plug using a Datalogic power cable.

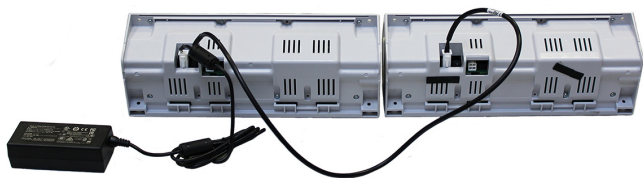

CAUTION

Use only the Datalogic power supply 91ACC0048 to power the Joya Touch 3-Slot Cradle.



NOTE

Insert the device into the dock with the screen facing front and the head facing down.



NOTE

The Joya Touch 3-Slot Cradle can be unlocked using the unlock key provided with the cradle or by software sending an unlock command from the inserted device. See the 3-Slot Cradle Quick Start Guide for further details.




NOTE

Under the same conditions, the fast charge connection can charge the battery up to twice as fast as the standard charge connection.

3-Slot Cradle LED Indicators

LED	Status
Power On (Blue LED)	
Solid blue	Dock is powered.
User LED (Green LED)	
Green dimming animation (all slots in sequence)	Cradle application start.
Flash green for 300 ms (single slot)	Device properly locked in.
Solid green (single slot)	Could notify that the slot is unlocked (if programmed to use green led to notify unlock status) or it could be controlled by software using our SDK.
Maintenance LED (Red LED)	
Blink red, 1 quick pulse (single slot)	Cradle not calibrated. Usually it is notified simultaneously on all slots. Solution: perform an "auto calibration" from DL Cradle Manager. Ensure that levers are free to move.
Blink red, 2 quick pulses (single slot)	Lever wrong position. It is open but it should be closed or vice versa. Solution: restore the lever position (e.g.remove the mechanical key from the slot).
Blink red, 3 quick pulses (single slot)	FOD (Foreign Object Detection). It's a WLC error related to metallic parts between transmitter and receiver coils. The power transfer is suspended. Solution: remove the device from the cradle, then remove the metallic part causing the problem.

LED	Status
Maintenance LED (Red LED) - Continued	
Blink red, 4 quick pulses (single slot)	EOC (end of charge) timeout error. The WLC EOC signal has been kept enabled by the terminal for too much time. Typically, it is caused by a bug in the terminal firmware. The power transfer is disabled.
Blink red, 5 quick pulses (single slot)	WLC generic error. The WLC system seems unstable and unable to setup a stable power transfer within a reasonable time. The power transfer is suspended. Solution: try to extract the device from the cradle and to re-insert it again.
Blink red, 6 quick pulses (single slot)	Device charging error.
Blink red, 7 quick pulses (single slot)	Wrong daisy chain configuration error. More than two cradles are connected in daisy chain. Solution: remove exceeding cradles from the chain.
Solid red (middle slot only)	Firmware upgrade.

**NOTE**

For further information on the Joya Touch 3-Slot Cradle, refer to the Joya Touch 3-Slot Cradle Quick Start Guide, included in the cradle's box, and to the Joya Touch 3-Slot Cradle Installation Guide, downloadable from our website www.datalogic.com.




Do not put any foreign object such as, but not limited to, coins, paper clips, stickers inside the slot of any of the docks (see the examples below).



Charge with USB

Use the Datalogic micro-USB power supply (p/n 94ACC1380) to charge the terminal from a power outlet.

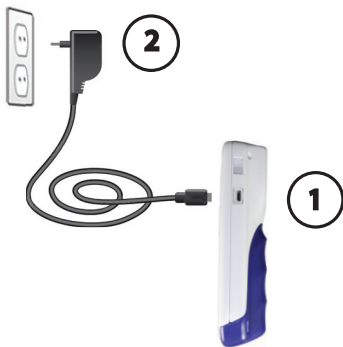

Battery Information

By default, the main battery pack is disconnected at the factory to avoid damage due to excessive draining.

Rechargeable battery pack is less than half of full charge when delivered.

The battery pack autonomy varies according to many factors, such as the frequency of barcode scanning, RF usage, battery life, storage, environmental conditions, etc.

Close to the limits of the working temperature, some battery performance degradation may occur.

The Joya Touch A6 should be charged at an ambient temperature between 0 - 35° C (32 to 95°F) to achieve the maximum charging rate.

Never charge the device battery in a closed space where excessive heat can build up.

As a safety precaution, the battery may stop charging to avoid overheating.

The Joya Touch A6 may get warm during charging; this is normal and does not mean a malfunction.

Even if the storage temperature range is wider, it is recommended to store the terminal and the batteries at environmental temperature, in order to achieve the longest battery life.



The Joya Touch A6 gets warm during charging. This is normal and does not mean a malfunction.



Avoid storing batteries for long periods in a state of full charge or very low charge.

We recommend charging the battery pack every two to three months to keep its charge at a moderate level to maximize battery life.

Annual replacement of rechargeable battery pack avoids possible risks or abnormalities and ensures maximum performance.



Do not incinerate, disassemble, short terminals, or expose to high temperature. Risk of fire and explosion. Use specified charger only. Risk of explosion if the battery is replaced by an incorrect type. Dispose of batteries as required by local authorities.



Use only Datalogic approved batteries and accessories for battery charging.

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions.

Il y a risque d'explosion si la batterie est remplacée par une batterie de type incorrect.

Mettre au rebut les batteries usagées conformément aux instructions.

Battery Safety Guidelines



WARNING

Installing, charging and/or any other action should be done by authorized personnel and following this manual.

The battery pack may get hot, explode, ignite, and/or cause serious injury if exposed to abusive conditions.

If the battery pack is replaced with an improper type, there is risk of explosion.

Do not place the battery pack in or near a fire or other heat source; do not place the battery pack in direct sunlight, or use or store the battery pack inside unventilated areas in hot weather; do not place the battery pack in microwave ovens, in clothes dryers, in high pressure containers, on induction cook surfaces or similar devices. Doing so may cause the battery pack to generate heat, explode or ignite. Using the battery pack in this manner may also result in a loss of performance and a shortened life expectancy.

To power the cradle, use only a Datalogic approved power supply. The use of an alternative power supply will void the product warranty, may cause product damage and may cause heat, an explosion, or fire.

The area in which the units are charged should be clear of debris and combustible materials or chemicals.

Do not use the battery pack of this terminal to power devices other than this device.

**WARNING**

Immediately discontinue use of the battery pack if, while using, charging or storing the battery pack, the battery pack emits an unusual smell, feels hot, changes color or shape, or appears abnormal in any other way.

Do not short-circuit the battery pack contacts connecting the positive terminal and negative terminal. This might happen, for example, when you carry a spare battery pack in your pocket or purse; accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the contacts of the battery pack (these look like metal strips on the battery pack). Short-circuiting the terminals may damage the battery pack or the connecting object.

Do not apply voltages to the battery pack contacts.

Do not pierce the battery pack with nails, strike it with a hammer, step on it or otherwise subject it to strong impacts, pressures, or shocks.

Do not disassemble or modify (i.e. bend, crush or deform) the battery pack. The battery pack contains safety and protection devices, which, if damaged, may cause the battery pack to generate heat, explode or ignite.

In case of leakage of liquid from the battery, avoid contact with liquid the skin or eyes. If the contact occurs, immediately wash the affected area with water and consult a doctor.

Do not solder directly onto the battery pack.

Do not expose the battery pack to liquids.



WARNING

Avoid any knocks or excessive vibrations. If the device or the battery is dropped, especially on a hard surface, you should take it to the nearest Authorised Repair Centre for inspection before continuing to use it.

If your device stops working for any reason, do not use its battery on other electronic devices without a prior check and approval by an Authorised Repair Centre.

Do not replace the battery pack when the device is turned on.

Do not remove or damage the battery pack's label.

Do not use the battery pack if it is damaged in any part.

Battery pack usage by children should be supervised.

Collect and recycle waste batteries separately from the device in compliance with European Directive 2006/66/EC, 2011/65, 2002/96/EC and subsequent modifications, with US and China regulatory laws and regulations about the environment.




Getting Started

Turn on the Device

To turn on the Joya Touch A6, press and hold the Scan Key or the Scan Trigger (for Pistol Grip models) for at least 4 seconds.





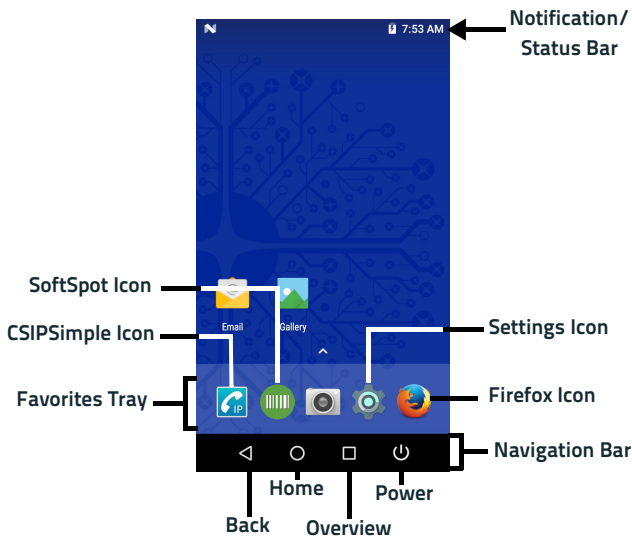






Home Screen



Home Screen Items


Notification/ Status Bar	Displays the time, status icons (right side), and notification icons (left side).
Favorites Tray	It is like a dock for your home screen. By default, it includes commonly used apps, but you can customize it.
CSIPSimple Icon	Launch the CSIPSimple App
SoftSpot Icon	Launch the SoftSpot application.
All Apps Icon	Opens the Apps window. Tap it to view the Apps loaded on your device.
Settings Icon	Opens the Settings.
Browser Icon	Opens the Browser application.
Back Button	Returns you to the previous page.
Home Button	Returns you to the home page.
Overview Button	Shows the list of recent applications.
Power Button	Shows the Power Menu (see Power Menu on page 34).

Status Bar Icons

	Wi-Fi is on.
	Wi-Fi not connected.
	Wi-Fi connected no internet.
	Connected to a Wi-Fi network.
	Bluetooth is on.
	Battery is low.
	External power source is connected.
	Battery is full.
	Battery is partially drained.
	Airplane mode.
	Vibrate mode.

Power Menu

Tap the **Power** button on the Navigation Bar to display the Power Menu.

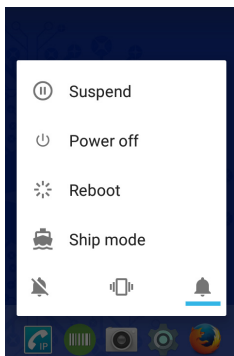

Alternatively, you can access the Power Menu by pressing the power key on the back of the device with a metallic clip:



Suspend

Select **Suspend** to turn the screen off and lock the terminal in order to save battery power. Also, the Joya Touch A6 automatically enters suspend mode when inactive for a programmed period of time. To set the timeout limit, see [Suspend Timeout on page 88](#).

To wake the device from suspend, press the Scan Key or the Scan Trigger (for Pistol Grip models).

To unlock the home screen, tap anywhere on the screen and drag your finger upward.

Power Off

Select **Power Off** to turn off the terminal. When you turn off the terminal, the session you are working on expires and it won't be possible to restore it.

Alternatively, you can shut down the device by pressing and holding the power key with a metallic clip for about 10 seconds:



Reboot

Select **Reboot** to perform a Soft Reset (see [Soft Reset on page 49](#)).

Ship Mode

Select **Ship Mode** to perform a complete shutdown of the device, after which the battery will be detached.


In the battery pack, undesired current consumption is reduced during a shipping period to extend the charge keeping time of the battery pack.

After this operation, the date and time settings will be lost.

To restart the device, connect it to a power supply or insert it into a dock.

Long Press Power Menu

Long press the **Power** button on the Navigation Bar until the Long Press Power Menu displays.

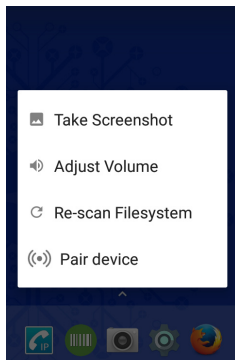

Take Screenshot

Select **Take Screenshot** to capture a screenshot of the current screen.

Adjust Volume

Select **Adjust Volume** to adjust the volume.

Re-scan Filesystem


When the Joya Touch A6 is connected to a host PC, you may need to refresh the file system to get changed files to show up in the File Status view.

Pair Device

Select **Pair device** to start a pairing session with a PC via DXU software. DXU is the Datalogic system application for device configuration and firmware upgrade from a Windows PC. (see [Desktop Configuration Utility \(DXU\)](#) on [page 128](#) for further information).

Starts a pairing with DXU by reading a barcode containing the configuration data of your PC.

Open DXU on your PC and tap **Scan2Deploy**:

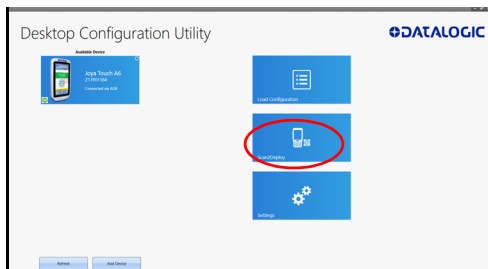

From the **Wi-Fi Configuration** window you can select the barcode type and set the Wi-Fi and pairing configuration data.

Tap **Print** to create the barcode; tap **Save** to save it on your hard disk:

Wi-Fi Configuration Barcode Settings

Barcode Generator for WiFi Configuration

1



Barcode Type:  

Wi-Fi Configuration

SSID*

Security

Password*


IP Settings

Pairing Configuration


Desktop IP Address

Port Number

If you select **Print**, the barcode displays on the screen:

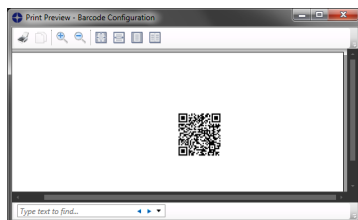


From the Joya Touch A6's Long Press Power Menu, select **Pair device**. Tap **Scan** to read the barcode:

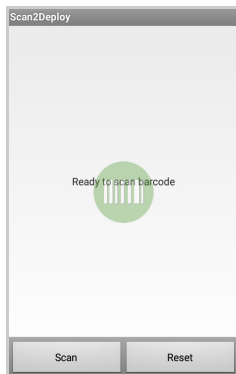

Quick Settings Menu





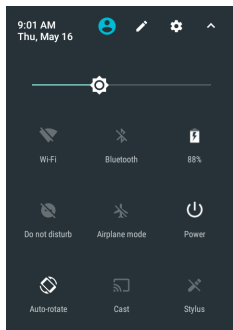


You can use this menu to toggle settings such as Wi-Fi, Bluetooth, auto-rotation and more.











To display the Quick Settings Menu, drag your finger twice from the top of your screen downward.



















Applications

The **All Apps** screen displays icons for all installed applications. The table below lists the default applications installed on the Joya Touch A6.

Icon	Description
	Agent - Device management solution that enables you to secure, monitor, manage and support your device. For more details, refer to the following link: https://www.air-watch.com/ .
	AirWatch Platform OEM Service - Service kit app that allows VMware AirWatch to provide extended management capabilities to generic Android devices. For more details, refer to the following link: https://www.air-watch.com/ .
	Amaze - Material Design file manager for Android devices. For more details, refer to the following link: https://github.com/TeamAmaze/AmazeFileManager .
	Avalanche - Enables rapid deployment and central management of Joya Touch A6 installations (see Avalanche on page 141).
	Calculator - Provides the basic and scientific arithmetic functions.
	Calendar - Use to manage events and appointments.
	Clock - Use to schedule alarms for appointments or as a wake-up.

Icon	Description
	Contacts - Use to manage contact information.
	CSipSimple - Voice over Internet Protocol (VoIP) application for Google Android operating system using the Session Initiation Protocol (SIP). See CSIPSimple on page 141 .
	DL Battery Manager - Provides information on the battery type, charge, status and temperature, allows to set the charging profile and to log battery data (see DL Battery Manager on page 103).
	DL Cradle Manager - Provides information on the cradle (see DL Cradle Manager on page 117).
	DL Ringtone Editor - Allows to create your own ringtones and notifications.
	DL Stager - Configuration tool (see DL Stager on page 127).
	Downloads - Lists all downloaded files.
	DXU Agent - Launch to start a pairing with DXU by reading a barcode containing the configuration data of your PC (see Desktop Configuration Utility (DXU) on page 128).
	Email - Use to send and receive email.
	Enterprise Agent- Enhances the lockdown functionalities of SureLock and SureFox to ensure advanced device security (see SureLock on page 142 and SureFox on page 142).

Icon	Description
	Firefox - Use it to access the Internet or intranet.
	Gallery - Use to view photos stored on the internal storage memory.
	Led Effects Editor - Allows to create and store LED effects (see Led Effects Editor on page 129).
	MobiControl - An enterprise mobility management solution that secures and manages the Joya Touch A6 and controls all aspects of business mobility (see MobiControl on page 143)
	Music - Play music stored on the internal storage memory.
	Notes - Create text notes.
	ProximityCalibrate - Allows to calibrate the proximity sensor (see ProximityCalibrate on page 131).
	Scan2Deploy – Use to pair device (see Pair Device on page 38).
	ScanEngineCamera - Use it to take photos.
	Scanner – Enables data capture (see Data Capture on page 145).

Icon	Description
	Settings - Use to configure the Joya Touch A6 (see Settings on page 53).
	SoftSpot - A configurable application meant to provide easy access to frequently used functionalities (see SoftSpot™ on page 133).
	Sound Recorder - Use to record audio.
	SureFox - Use to controls web access for the users (see SureFox on page 142).
	SureLock - Use to secure and lock your device (see Connections on page 149).
	Videos - Play videos stored on the internal storage memory.

Touch Gestures

Tap	Tap the screen with your finger or with the stylus to open items and select options.
Drag	Hold your finger or the stylus on the screen and drag across the screen to scroll or pan. Drag in a list to select multiple items.
Tap-and-hold	Tap and hold your finger or the stylus on an item to see a list of actions available for that item. On the pop-up menu that appears, tap the action you want to perform.

Using the Stylus Pen

The stylus selects items and enters information. It functions as a mouse. Pen input is disabled by default. Tap the **Stylus** icon on the Quick Settings Menu to enable it (see [Quick Settings Menu on page 41](#)).



The stylus tip size must be minimum 4 mm.

To prevent damage to the screen, do not use sharp devices or any device other than your finger or a touch screen stylus.

Do not apply not necessary high pressures on the screen.

For applications where an intensive use of the touch screen is foreseen, please consider that touch screen components are subject to progressive wear.

Resetting the Device



Configuration Reset

Configuration reset sets the configuration of the device (all its settings) to a known status: the factory status or an enterprise-user-defined status.

Factory Data Reset

Brings the device to the default configuration, clearing your device's internal storage and all the user-customized settings.

1. Tap **Settings > Backup & reset**.
2. Tap **Factory data reset**
3. Tap **RESET PHONE**.

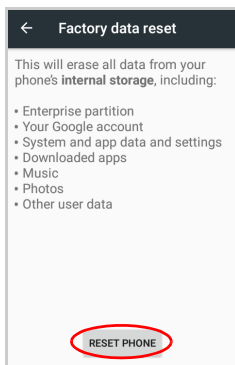
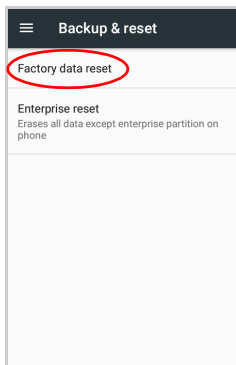


Enterprise Reset

Enterprise Reset brings the device to an enterprise-user-defined configuration, clearing all data and settings except the ones persisted by the enterprise system applications in the **enterprise** flash partition and in the **splash** flash partition.

The Enterprise folder is a file system storage that is used for deployment and device-unique data. It is persistent and maintains data after an Enterprise reset. Applications and custom settings (i.e. custom boot animation and wallpaper) can persist data after an Enterprise Reset by saving them to the enterprise folder.

1. Tap **Settings >Backup & reset**.
2. Tap **Enterprise reset**
3. Tap **RESET PHONE**.

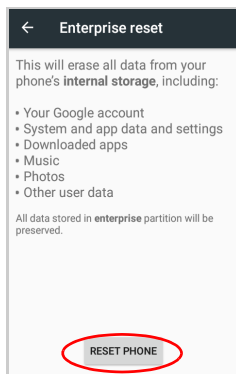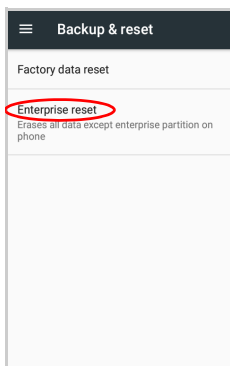


Device Reset

Device reset restarts the device.

Soft Reset

Restarts Android Operative System through an Android API function. It is generally used when some applications stop responding, or it is automatically issued by Android after a Configuration reset.

1. Press the **Power** button.

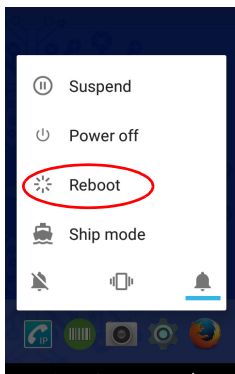

2. Tap **Reboot**.
3. The device shuts down and then reboots.

Hard Reset

Restarts the device resetting all the hardware components. This procedure guarantees the safe reboot of the device in any condition, without causing damage to the device and without data loss. It is generally used when the device stops responding or after a critical failure that compromises its usability.

To perform a hard reset, do the following steps:

1. Perform a full shutdown by pressing and holding the power key with a metallic clip for about 15 seconds. After clip release, the left and right LEDs will blink once simultaneously to confirm the correct shutdown (see [LED Indicators on page 51](#)).



2. Press the Scan Key or the Scan Trigger to restart the device.





NOTE

After a hard reset, the date and time settings will be lost.

LED Indicators

The LEDs illuminate to indicate various functions or errors on the reader. Joya Touch A6 LEDs are fully customizable through the SDK, the **Settings** app or the **Led Effects Editor** app. See [Led Notifications on page 62](#) and [Led Effects Editor on page 129](#) for more details.

The following table lists the default indicators.

LED	Default Status
Left and Right LEDs 	<p>The two LEDs blink alternately in case of critical charge (the device is charging, but the battery level is too low to turn on).</p> <p>The two LEDs blink once simultaneously after a full shutdown.</p>
Bottom LED (Good Red) 	<p>Illuminates when a good decode is completed.</p>

Magnetic Sensor Calibration

Joya Touch A6 is a compass-enabled device. Its magnetic sensor allows you to use any compass application to determine north and south and display cardinal directions, no matter which orientation the phone is in.

To calibrate the magnetic sensor, hold the device in front of you and wave it through the air in a figure 8 pattern as shown in the picture below:






Settings

Overview



The **Settings** app allows you to set system parameters to customize your device. Tap the **Settings** icon on the **Favorites Tray** or on the **All Apps** screen to open the **Settings** screen.

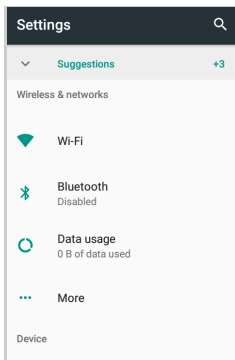



Wi-Fi Settings

Connect to Wi-Fi Network


1. To turn on the Wi-Fi, tap **Settings** > **Wi-Fi** and switch right to the **On** position. The Joya Touch A6 scans for available Wi-Fi networks within range and lists them. If the device finds a network that you connected to previously, it will connect to it automatically. Secured networks are indicated with a lock icon.

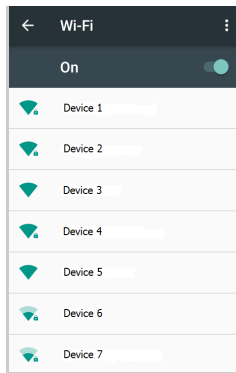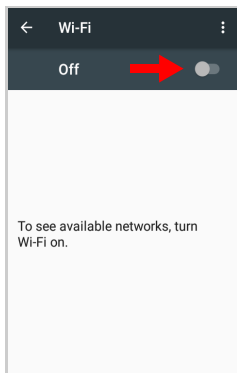

2. Select the network name you want to connect to from the available network list.
3. If the network is open, tap the profile and then tap **Connect**, or press and hold and then select **Connect to network**:

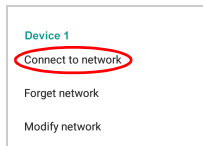


4. If the network is secured, a dialog box appears requesting information relevant to the network security protocol (e.g., password, key, or certificate). Enter the required information, then tap **Connect**:

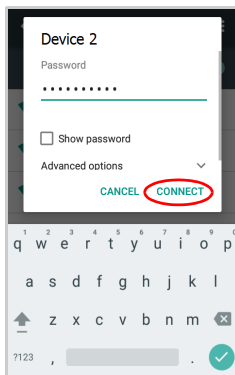


Add a Wi-Fi Network

1. Tap **Settings** > **Wi-Fi** and verify that the Wi-Fi is turned on.
2. Tap **Add network** at the end of the available network list:

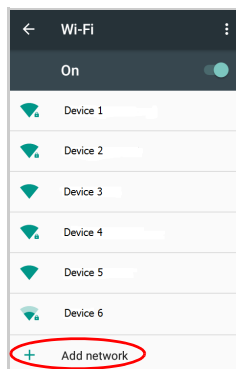

3. Enter the Network SSID (Wi-Fi network name). For secure Wi-Fi network connections, tap **None** under **Security**, and then select the type of security protocol required from the pop-up menu (e.g., WEP, WPA/WPA2 PSK or 802.1xEAP). Enter any additional security information required by the type of security protocol selected.

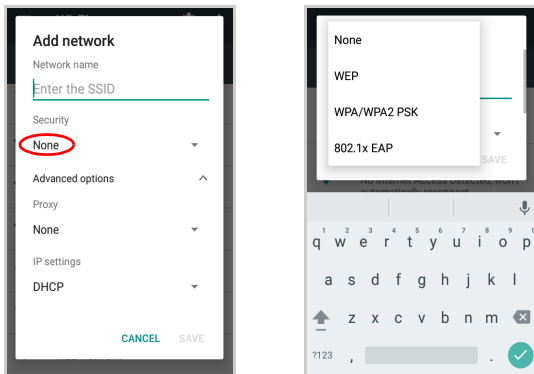



4. Tap **Save**.

Bluetooth Settings

To create a Bluetooth® pairing between your device and another device that has Bluetooth® capabilities, ensure that the two devices are turned on, discoverable, and within close range.


Enable Bluetooth®

1. To turn on the Bluetooth®, tap **Settings > Bluetooth** and switch right to the **On** position. Once the Bluetooth® radio is enabled, the terminal automatically starts searching for discoverable devices.

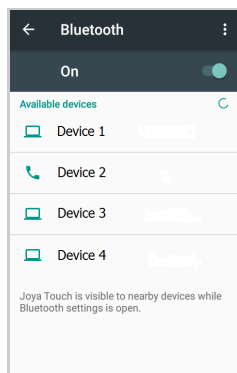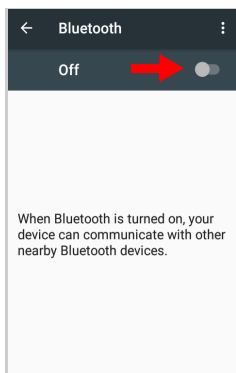

Connect to Other Bluetooth® Devices

1. Tap **Settings** > **Bluetooth** to search for available Bluetooth® devices. Flick the list and select a device. The **Bluetooth pairing request** dialog box displays on the screen:


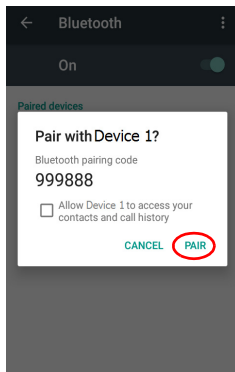


2. Make sure both devices show the same passkey and tap **Pair**.
3. The selected Bluetooth® device is added to the **Paired Devices** list and a paired connection is established.


Configure, Rename or Unpair Bluetooth@ Devices

Tap **Settings** > **Bluetooth**.



Select a device from the **Paired Devices** list and tap the settings icon next to its name. The **Paired devices** window displays on the screen. Type in the **Name** field to rename the paired device.

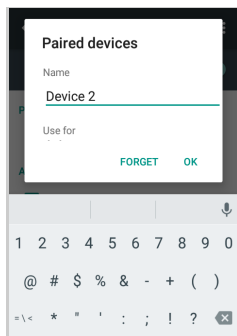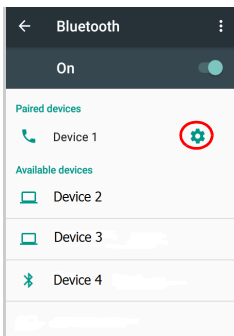

Tap **FORGET** to unpair:

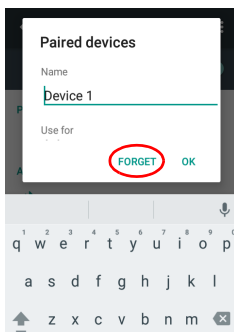

To rename your device, tap the Menu icon at the right top of the screen and select **Rename this device**.

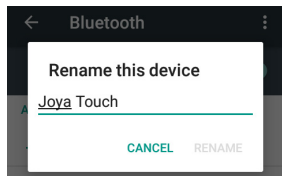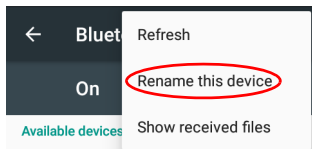


Tap **Rename** to confirm.


Led Notifications

The **Led notification** settings allows to configure the LED indicators (see [LED Indicators](#) on page 51).


Tap **Settings** > **Led notifications**. The first window lists the events/states the LED should signal. Select the desired event.

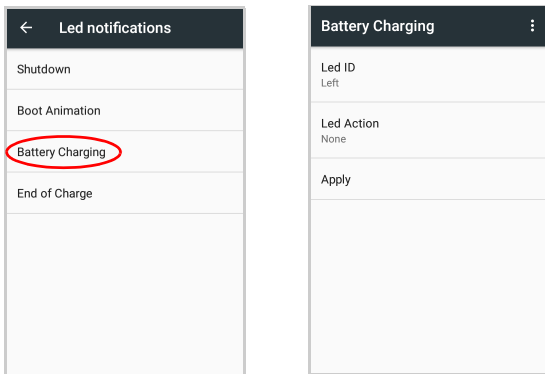

Tap **Led ID** to select the LED you want to assign to the event.

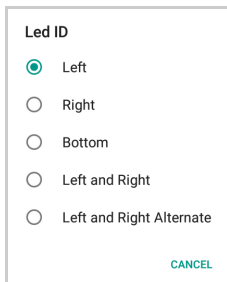


Tap **Led Action** to configure the LED behaviour.

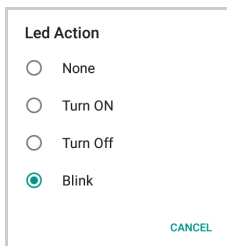

A dialog box titled "Led Action" with four radio button options: "None", "Turn ON", "Turn Off", and "Blink". The "Blink" option is selected, indicated by a green dot. A "CANCEL" button is located at the bottom right of the dialog.

Use the **Blink** window to configure the blink frequency and duration:

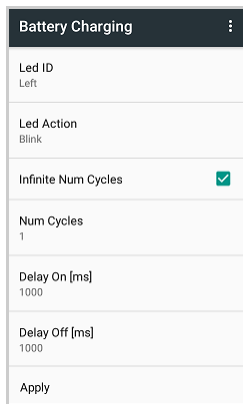


A settings window titled "Battery Charging" with a menu icon in the top right corner. It contains several settings:

- Led ID: Left
- Led Action: Blink
- Infinite Num Cycles:
- Num Cycles: 1
- Delay On [ms]: 1000
- Delay Off [ms]: 1000
- Apply


Tap **Apply** to confirm the settings.

If the **Bottom** LED is selected, the **Led Action** list will include two more options:

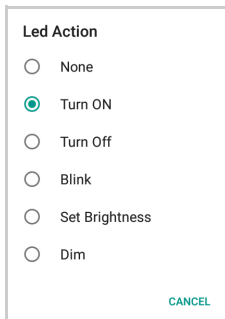

A screenshot of a settings menu titled "Led Action". It contains a list of radio button options: "None", "Turn ON" (which is selected), "Turn Off", "Blink", "Set Brightness", and "Dim". A "CANCEL" button is located at the bottom right of the menu.

Set Brightness allows to configure the LED's brightness.

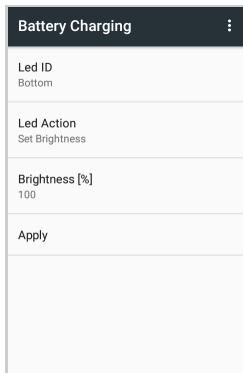


A screenshot of a settings screen titled "Battery Charging". It displays the following configuration:

Led ID Bottom
Led Action Set Brightness
Brightness [%] 100
Apply

Tap **Apply** to confirm the settings.

Dim allows to adjust the LED's brightness through an editor. Select **Dim** and the tap **Dimming Sequence** to draw the dimming curve:

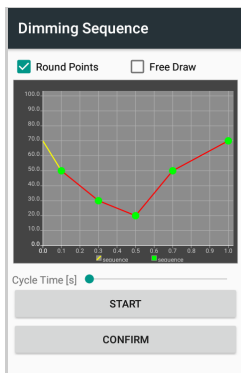


Tap **CONFIRM**.

Scanner Settings


Before you start reading barcodes, use the **Settings** app to view and configure all settings for the scanner.

From the applications menu, tap **Settings** > **Scanner Settings**. Select the desired configuration from the following options:

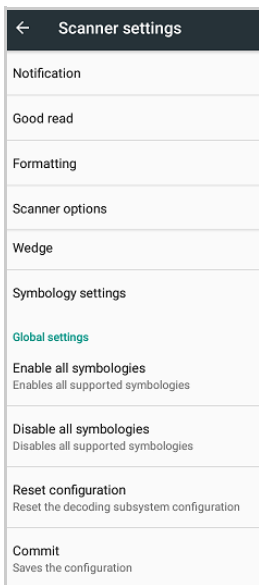

Notification

Use it to configure the good read tone and display notification:

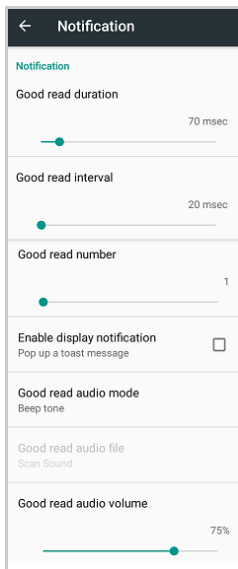

Good Read Duration

Sets the duration of the notification (LED, green spot or beep) the scanner emits on a good read.

Good Read Interval

Sets the interval between each notification (LED, green spot or beep) the scanner emits on a good read.

Good Read Number

Sets the number of notifications (LED, green spot or beep) the scanner emits on a good read.


Enable Display Notification

Enables display notifications (toasts) and is enabled by default. If cleared, the scanner is disabled until you launch a scanner listener application developed using the Datalogic SDK or enable a keyboard/intent wedge.

Good Read Audio Mode

Sets the audio tone to:

- None
- Beep tone
- Audio file

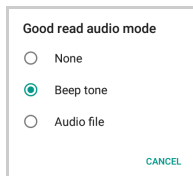

If **Audio file** is selected, the option **Good read audio file** displays. Tap it to select the file you want to use as good read ringtone.




The Notification settings do not apply to an audio file.

Good Read Audio Volume

Sets the volume of beep tone or audio file (if enabled).

Good Read


Use it to enable good read notifications (LED, Green Spot):

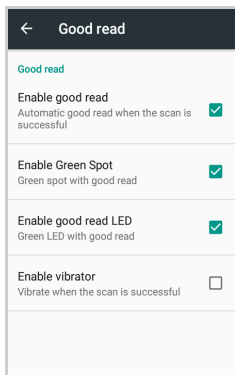

Tap **Enable good read** to enable/disable notifications (main enabler), then select the notification you want to use.

Formatting

Allows to format the barcode text by enabling and configuring the use of prefix, suffix, group separator and code identifier:

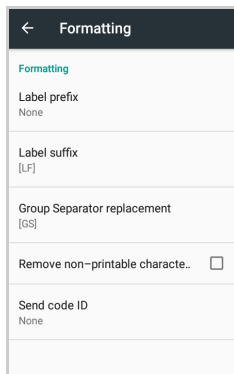


The screenshot shows a settings menu titled "Formatting". It contains the following options:

- Formatting** (header)
- Label prefix**: None
- Label suffix**: [LF]
- Group Separator replacement**: [GS]
- Remove non-printable character..**:
- Send code ID**: None

Label Prefix


Tap **Label prefix** to enter the characters you will be using as prefix. Tap **Add special** to select a special character to be added in the current cursor position:

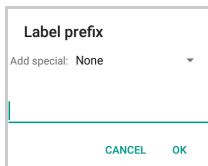

The screenshot shows a dialog box titled "Label prefix". It contains the text "Add special: None" with a dropdown arrow. At the bottom, there are two buttons: "CANCEL" and "OK".

Label Suffix

Tap **Label suffix** to enter the characters you will be using as suffix. Tap **Add special** to select a special character to be added in the current cursor position:

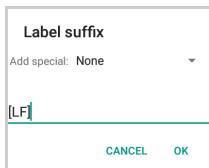

Label suffix

Add special: None


[LF]

CANCEL OK

Group Separator Replacement

The Group Separator replacement is a non printable data separator character (ASCII code 1D hex). Tap **Group Separator replacement** to enter a string that will be used as GS data separator substituting the standard GS character.

Tap **Add special** to select a special character to be added in the current cursor position:

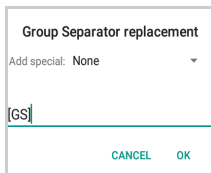

Group Separator replacement

Add special: None

[GS]

CANCEL OK

Remove Non-Printable Characters

Select it to remove non-printable characters from a unicode string.

Send Code ID

Tap **Send code ID** to add a code identifier prefix or suffix to the barcode string:

Send code ID

None

DLM identifier before

AIM identifier before

User defined identifier before

DLM identifier after

User defined identifier after

CANCEL


The AIM ID (Association for Automatic Identification and Mobility) is an international barcode identifier. When **AIM identifier before** is enabled, the AIM ID is inserted at the beginning of the decoded barcode.

DLM identifier is a Datalogic specific character identifier.

User defined identifier is a user specific character identifier you can set in the related symbology settings menu.

Scanner Options

Tap **Scanner Options** to customize the Joya Touch A6 scanning behavior.

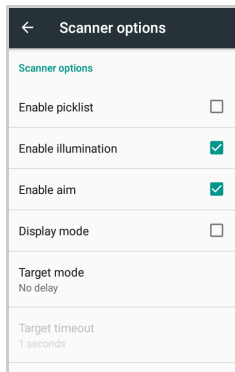

Enable Picklist

If selected, it allows you to pick and decode a barcode from multiple barcodes printed close together, when the scan illumination intersects more than one barcode. Only the targeted barcode will be returned.

Enable Illumination

If selected, it causes the scanner to turn on the illumination to aid decoding.

Enable Aim

Enables the laser aim.

Display Mode

Enable to scan barcodes from mobile phones or PC displays.

Target Mode

If enabled, when the scan button is pressed, the scanner will project an aiming pattern to assist in centering over the barcode before scanning. Tap **Target mode** to select the desired targeting behavior:

Target mode

No delay

Spot Timeout

Release Scan

CANCEL

No Delay

Target mode is disabled.

Spot Timeout

Scanning takes place after a programmable time upon pressing the scan button. Tap **Target timeout** to set the duration of the spot:

Target timeout

0.25 seconds

0.5 seconds

1 seconds


1.5 seconds

2 seconds

CANCEL


Release Scan

Scanning takes place after the scan button is released. Tap **Release scan timeout** to set the scanning timeout after releasing the scan button:

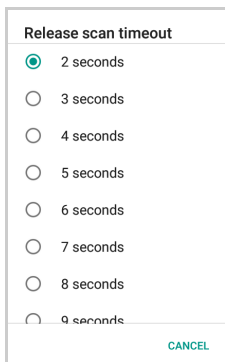


Decode Timeout

Drag the **Decode timeout** slider to set the maximum amount of time the scanner attempt to decode after target timeout (in case **Spot Timeout** is enabled) or after the scan button is pressed (in case **Target mode** is disabled):



Enable Multi Scan

If enabled, it allows you to capture multiple labels sequentially.

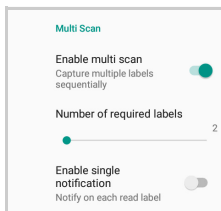

Number of Required Labels


Drag the slider to indicate how many barcodes you want to collect.

Enable Single Notification

If enabled, it enables indicators for each label, in order to get an intermediate notification for each label decoded.

Wedge

Use it to enable or disable the keyboard wedge and the intent wedge:

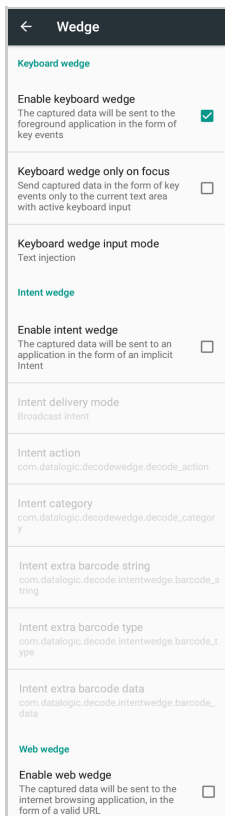

Enable Keyboard Wedge

Enables/disables the keyboard wedge mode.

Keyboard Wedge Only on Focus


If selected, the scanner is enabled whenever a text area is in focus and can receive text.

It provides a safer way to input keystrokes into the foreground application, allowing to send captured data in the form of key events only to the current text area with active keyboard input.

If this setting is not enabled, keystrokes will be always dispatched to the foreground application.

Keyboard Wedge Input Mode

Allows to select the scanned data input mode.

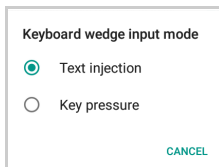

Text Injection

The scanned barcode is injected into the text area.

Key Pressure

The scanned barcode is translated into keyboard strokes.

Enable Intent Wedge


Enables the broadcast of specific intents to the listening applications. The broadcasted intent can have its custom Action, Category and extra content fields. The scanner is enabled whenever the intent option is flagged.

Enable Web Wedge

Enables direct data input into internet browsing applications, in the form of a valid URL.

Symbology Settings

Each barcode symbology can be customized with additional settings that may affect that specific barcode decoding. Tap **Symbology settings** to configure symbology decoding options:

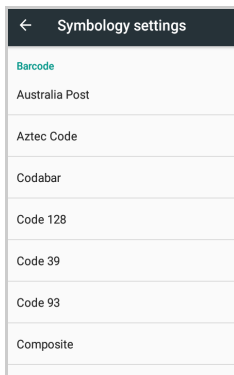

Refer to the sample symbology control panels for examples of the types of fields and options you can modify. The example below shows the settings of a Code 128 barcode symbology:

The screenshot shows a settings menu titled "Decoder parameters" with a back arrow on the left. The menu is divided into sections for different symbologies. The "Code 128" section is currently selected and highlighted in light blue. It contains the following settings:

- Enable**: A toggle switch that is turned on, indicated by a green checkmark.
- User ID**: Set to "K".
- Length control**: Set to "Range".
- L1 length**: Set to "2".
- L2 length**: Set to "99".

Below the Code 128 section, the "GS1-128" section is partially visible.

Code 128	
Enable	<input checked="" type="checkbox"/>
User ID	K
Length control	Range
L1 length	2
L2 length	99

Global Settings

Use this section to change symbologies settings globally and to persist them.

Global settings
Enable all symbologies Enables all supported symbologies
Disable all symbologies Disables all supported symbologies
Reset configuration Reset the decoding subsystem configuration
Commit Saves the configuration

Enable All Symbologies

Enables all barcode symbologies.

Disable All Symbologies

Disables all barcode symbologies.

Reset Configuration

Resets back to default scanner configuration settings.

Commit



Saves the configuration settings to a persistent storage. Any change you make is temporary and will be lost when the system restarts, unless you tap **Commit**.

System Upgrade


Allows you to upgrade your operative system to the latest version.

Local Upgrade

From the **Settings** menu, tap **System upgrade** > **Local upgrade**. Navigate the file system and select a pre-charged update package. Select the update package you want to install:

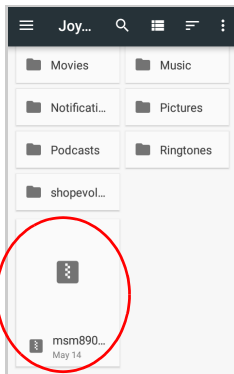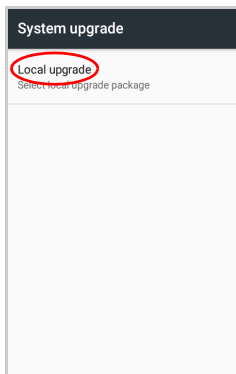

The following window displays on screen, showing information about the device and the update package components:

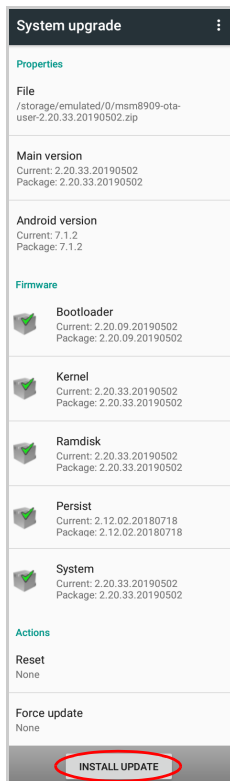

The screenshot shows a 'System upgrade' window with the following sections:

- Properties**
 - File**: /storage/emulated/0/msm8909-ota-user-2.20.33.20190502.zip
- Main version**
 - Current: 2.20.33.20190502
 - Package: 2.20.33.20190502
- Android version**
 - Current: 7.1.2
 - Package: 7.1.2
- Firmware**
 - Bootloader**: Current: 2.20.09.20190502, Package: 2.20.09.20190502
 - Kernel**: Current: 2.20.33.20190502, Package: 2.20.33.20190502
 - Ramdisk**: Current: 2.20.33.20190502, Package: 2.20.33.20190502
 - Persist**: Current: 2.12.02.20180718, Package: 2.12.02.20180718
 - System**: Current: 2.20.33.20190502, Package: 2.20.33.20190502
- Actions**
 - Reset**: None
 - Force update**: None

At the bottom, there is a button labeled **INSTALL UPDATE**, which is circled in red in the image.


The **PROPERTIES** section shows information about the device model and OS version and the update package version.

The **FIRMWARE** section shows information about each single update component.

The **ACTIONS** section allows to:

- reset the device configuration after the update (see [Resetting the Device on page 47](#))
- force the update of all components, including those already updated.

Tap **Install Update**. The device will reboot and a success notification will be displayed. Tap the notification to display a report showing the installed update components:

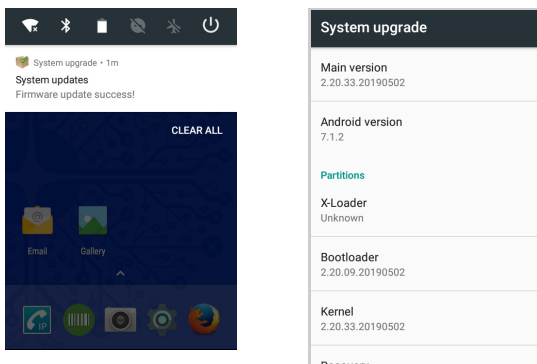

If the update fails, the screen will display a failure message and a report showing the reasons for failure.

**NOTE**

During the update, ensure that:

- battery level is more than 10% if the Joya Touch A6 is not connected to a power source;
- or
- battery level is more than 5% if the Joya Touch A6 is connected to a power source (USB or dock).

**NOTE**


Update is always done in recovery mode (see [Recovery Mode](#) on page 86).

Recovery Mode

Recovery is an independent, runtime environment that's included on a separate bootable partition from the main Android OS. It contains tools to help repair your installations as well as install official OS updates by using a combination of key presses. Its main purpose is to reset the device, wipe data or perform system updates when the system crashes and the screen is unresponsive.

To enter **Recovery Menu**:

1. Turn off the Joya Touch A6 (see [Getting Started on page 31](#)).
2. Press the Power key with a metallic clip and, immediately after, press the Scan Key.
3. The **Recovery Menu** displays on the screen:

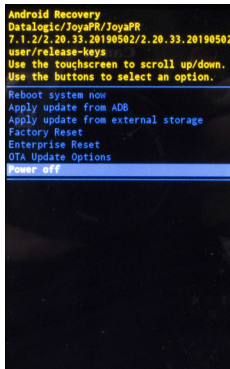

4. Use the touch screen to scroll up/down the menu. You can apply/force updates and perform a configuration reset. Press the Scan Key or the Scan Trigger to select.
5. Select **Reboot system now**. The device reboot is complete.

**NOTE**


In Recovery mode, you can only apply updates from external storage (see [Local Upgrade on page 82](#)).

Advanced Settings


Suspend Timeout

You have two options to set the suspend timeout (see [Suspend on page 35](#) for more information on Suspend Mode):


1. Tap **Settings > Advanced settings**:
 - **Suspend on external power** sets the number of seconds without user input activity before the system is suspended while running on external power.

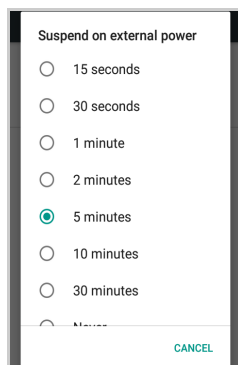

- **Suspend on internal battery** sets the number of seconds without user input activity before the system is suspended while running on battery power.

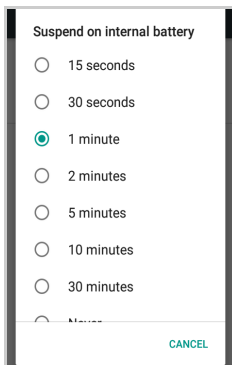

2. Tap **Settings** > **Display** > **Sleep** to set the number of seconds without user input activity before the system is suspended while running on either battery power or external power.

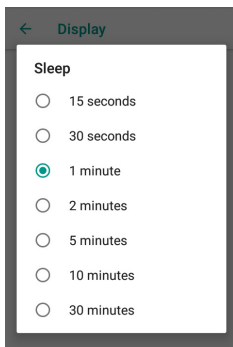


timeouts, the **Display** page's **Sleep** control will display the **Suspend on internal battery** if no external power is connected; if the device is connected to an external power source (USB or dock), it will display the **Suspend on external power**.

If you set the **Display** page's **Sleep** control to a new value, it will override both timeouts for external power and internal battery.


Charging Mode

Sets the battery level at which the device turns on automatically. The default value is 4%.




Cradle Update

Select to enable automatic firmware update of the cradle when you insert the device.




Wake-Up Configuration


The default wake-up source is the Scan Key. Tap **Settings** > **Advanced settings** > **Configure wake-up sources** to configure other wake-up sources. Possible wake-up buttons are Front trigger (Scan Key), Pistol trigger (Scan Trigger) and Motion (see [Triggers on page 100](#) for more details).

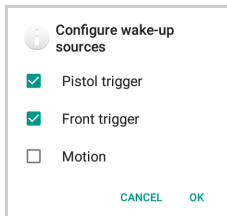



If **Motion** is selected, your device will wake-up as soon as it detects motion. Tap **Motion wake-up sensitivity** to configure the motion detector's sensitivity:

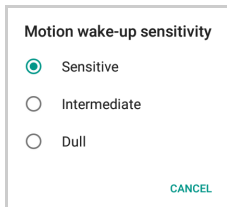

Low Power Options

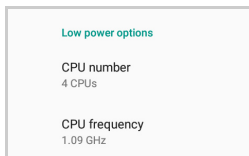


You can configure the Battery saver mode (see [Quick Settings Menu on page 41](#)) by setting CPU number and frequency:

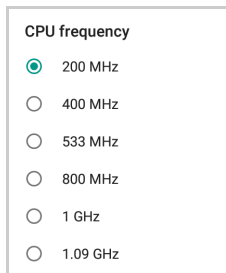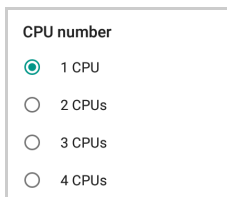

Input Configuration

Lock Keyboard Input


Select **Lock keyboard input** to lock user input from the keyboard. The following pop up window displays on screen asking for confirmation:

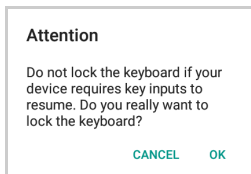


To unlock the keyboard, clear the **Lock keyboard input** check box.

Key Remapping

Tap **Key remapping** to remap an input key, then press the key you want to remap. You can remap the Front Trigger and the Pistol Trigger.

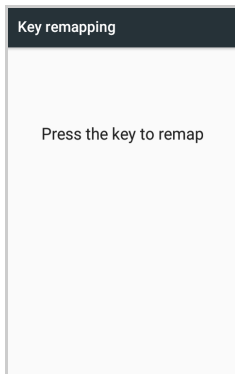


The following window displays on screen:

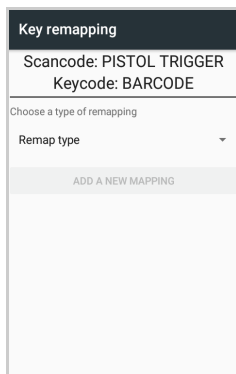

- **Scancode** represents the physical location of a keyboard key.
- **Keycode** represents the value that is mapped to a specific key.

Tap **Remap type** to select the remapping type:

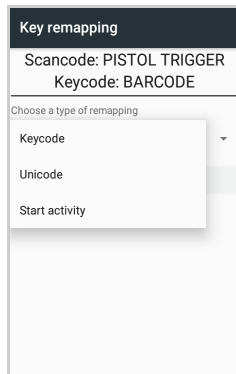

Keypress

Select **Keypress** to map the selected key to a new function:

Key remapping

Scancode: PISTOL TRIGGER
Keypress: BARCODE

Choose a type of remapping

Keypress ▾

Desired Android key code
HOME ▾

Desired Android meta state
None ▾

Confirm after configuring a valid remapping

ADD A NEW MAPPING

- Tap the second menu (default = **DISABLE KEY**) to select the new function you want to assign to the selected key.
- Tap the last menu (default = **None**) to add a modifier key (such as **Ctrl**, **Shift** or **Alt**).

Tap **ADD A NEW MAPPING**. A window displays showing the new keymap.


Remapped keys

Swipe left or right to change an entry



■ ■ ■ ■	ScanCode: PISTOL TRIGGER	None
■ ■ ■ ■	Keypress: HOME	None

Unicode

Select **Unicode** to remap a key to display Unicode characters (such as symbol "\$"):


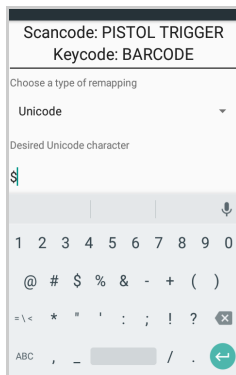


Press the Back Button on the navigation bar and then tap **ADD A NEW MAPPING**. A window displays showing the new keymap:

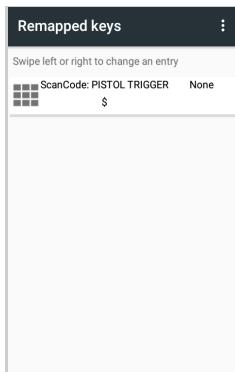
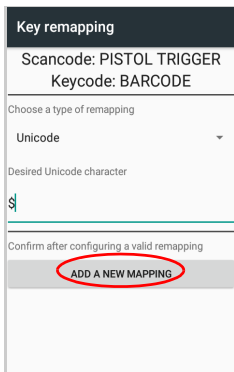


Start Activity

Select **Start activity** to remap a key to launch an application loaded on your device. Tap **SELECT APPLICATION**:

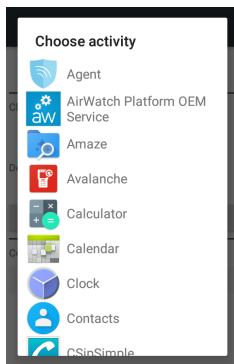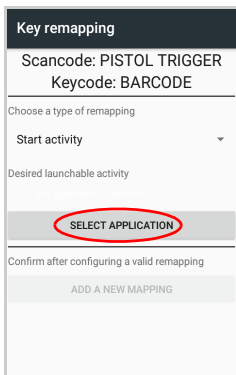


Select the desired application and then tap **ADD A NEW MAPPING**. A window displays showing the new keymap:

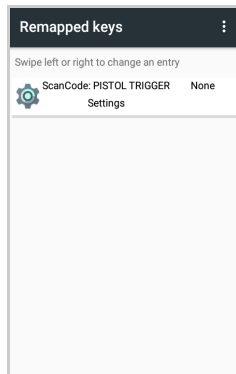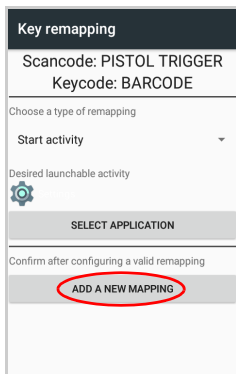

View All Remapped Keys


Tap **View all remapped keys** to display all remapped keys:

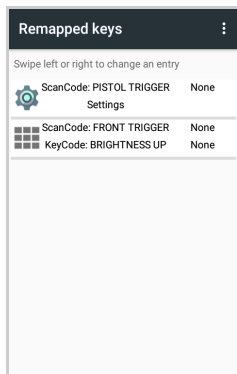

Swipe left to edit an entry. Swipe right to remove an entry and reset the key mapping back to default.

Triggers


Tap **Triggers** to enable/disable the trigger keys. The physical triggers are enabled by default.

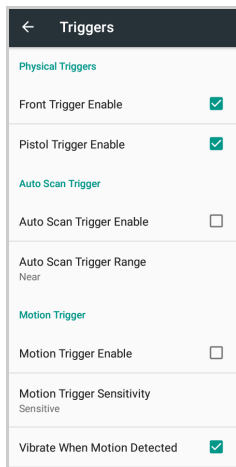

Auto Scan Trigger

If **Auto Scan Trigger** is enabled, the device will automatically scan barcodes without a trigger being pressed.

Tap **Auto Scan Trigger Range** to select the maximum distance at which the device will automatically start scanning barcodes.

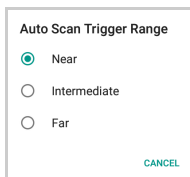

Motion Trigger

If **Motion Trigger Enable** is selected, the scan engine will be enabled as vigorous motion is detected.

A vibration notifies you that the scan engine is enabled and ready to scan a barcode. Select/clear the **Vibrate When Motion Detected** check box to enable/disable this notification.

Tap **Motion Trigger Sensitivity** to configure the motion detector's sensitivity:

Motion Trigger Sensitivity

Sensitive

Intermediate

Dull

NOTES





Datalogic Applications

DL Battery Manager

This application provides information about the battery features and status, allows to configure the battery charging profile and to log battery data.

Tap **All Apps** > **DL Battery Manager** icon, then tap the menu icon on the top left corner of the screen, or swipe right to display the menu.

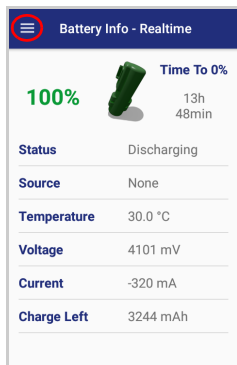

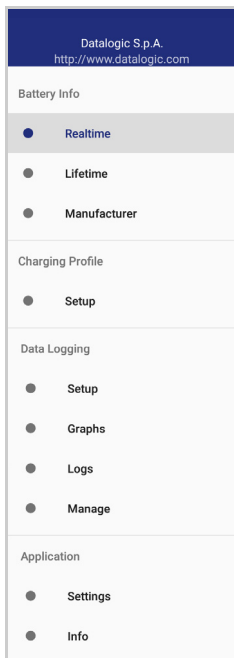


Battery Info


The **Battery Info** section provides information about the battery's health, capacity, manufacturer, level and charging status.

Battery Info - Realtime

This window provides real-time information about the battery.

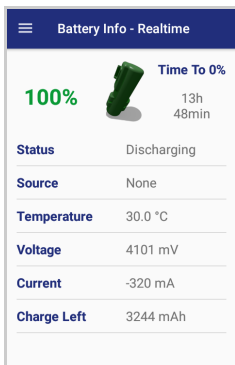

Discharge Mode

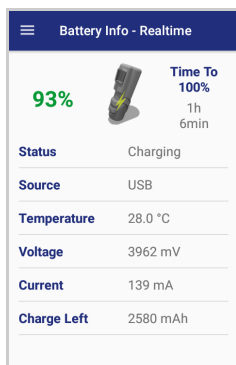

Charge Mode

The top section shows the battery level and the time left to full discharge (when in discharge mode) and to full charge (when in charge mode).

Status

Displays the charging status.

Source

Displays the charging source.

Temperature

Displays the real-time temperature.

Voltage

Displays the real-time voltage.

Current


Displays the real-time current.

Charge Left

Shows how much battery power is left.

Battery Info - Lifetime

This window displays information and statistics about battery life, health and usage over its whole life cycle.

Battery Info - Lifetime		
HEALTH GOOD		STATE OF HEALTH 94%
Total Discharge	85.2 Ah	
Full Charge	2778 mAh	
Temperature	min = 0.1 °C max = 44.3 °C	
Voltage	min = 2462 mV max = 4377 mV	
Charge Current	max = 1938 mA	
Discharge Current	max = 1242 mA	

Health

Shows the current battery health and signals potential errors.

State of Health

Shows the current battery's health level.

Total Discharge

Shows how much the battery has been used over its whole life cycle.

Full Charge

Shows the actual maximum capacity available to the user.

Temperature

Shows the maximum and minimum temperature reached by the battery.

Voltage

Shows the maximum and minimum voltage reached by the battery.

Charge Current

Shows the maximum charge current.

Discharge Current

Shows the maximum discharge current.

Battery Info - Manufacturer

This window displays the model name, the type, the nominal capacity, the serial number and the manufacture date of the battery.

Battery Info - Manufacturer	
	
Model	BT-44
Technology	Li-ion
Cell Capacity	3030 mAh
Serial Number	TW180302326
Manufacture Date	03-2018

Charging Profile

Charging Profile - Setup

This window allows to customize the charging process according to the user's needs and priorities.


To configure a charging profile, select 1 or 2 of the following preferences:


- Battery Lifetime.
- Maximum Capacity.
- Charging Speed.

If a third preference is selected, the system will automatically clear the oldest option.

Tap **Apply Profile** to confirm.

You can configure up to 6 different charging profiles:

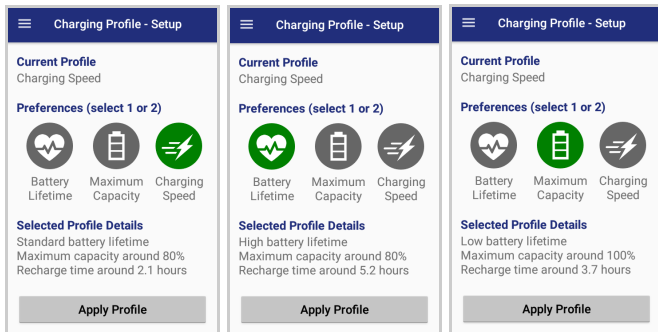

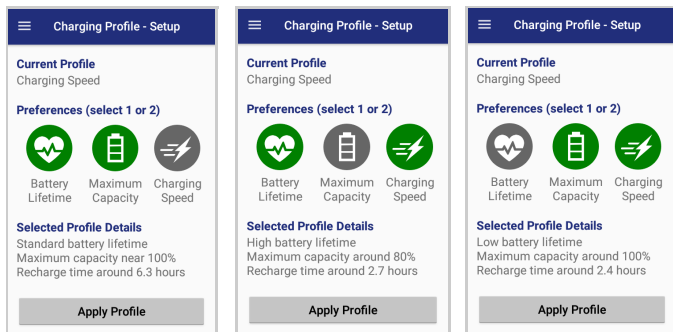

Once you have set your profile, it will be applied by default whenever you charge the device.

You can change your profile at any time, even during charging.



Data Logging

The data logging feature allows to collect, store, display and analyze minute-by-minute battery data.

Setup


Use the **Setup** window to select the data you want to log.

The data logging is disabled by default. To enable it, tap **Enable Data Logging**. When enabled, the log is always running, even when the device is in suspend mode.

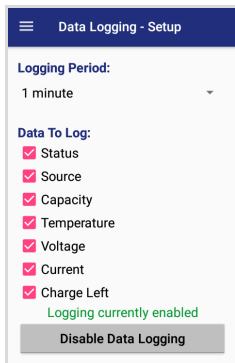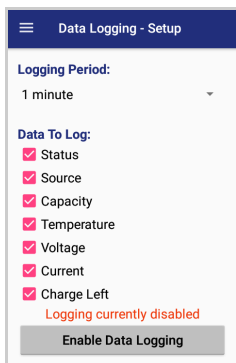


Graphs


The **Graphs** window provides a graphical display of selected data on a specific date.

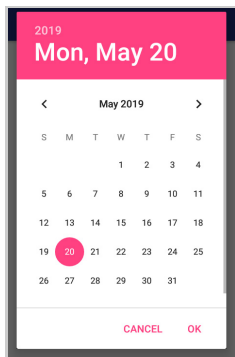

Select Date

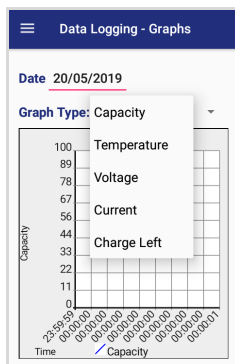


Select Data

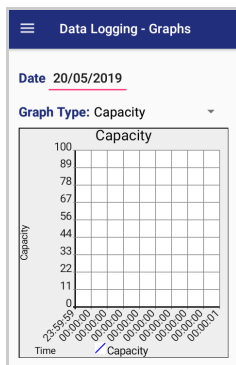

Logs

The **Logs** window displays data details by date.

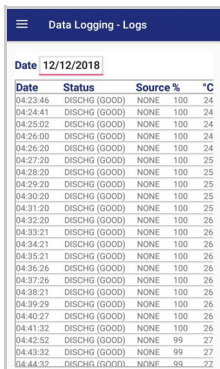


The screenshot shows the 'Data Logging - Logs' window. At the top, there is a menu icon and the title 'Data Logging - Logs'. Below the title, there is a date selector showing '12/12/2018'. The main content is a table with the following columns: Date, Status, Source %, and °C. The table contains 20 rows of data, all with a status of 'DISCHG (GOOD)' and a source percentage of 100. The temperature values range from 24 to 27 degrees Celsius.


Date	Status	Source %	°C
04:23:46	DISCHG (GOOD)	NONE 100	24
04:24:41	DISCHG (GOOD)	NONE 100	24
04:25:02	DISCHG (GOOD)	NONE 100	24
04:26:00	DISCHG (GOOD)	NONE 100	24
04:26:20	DISCHG (GOOD)	NONE 100	24
04:27:20	DISCHG (GOOD)	NONE 100	25
04:28:20	DISCHG (GOOD)	NONE 100	25
04:29:20	DISCHG (GOOD)	NONE 100	25
04:30:20	DISCHG (GOOD)	NONE 100	25
04:31:20	DISCHG (GOOD)	NONE 100	25
04:32:20	DISCHG (GOOD)	NONE 100	26
04:33:21	DISCHG (GOOD)	NONE 100	26
04:34:21	DISCHG (GOOD)	NONE 100	26
04:35:21	DISCHG (GOOD)	NONE 100	26
04:36:26	DISCHG (GOOD)	NONE 100	26
04:37:26	DISCHG (GOOD)	NONE 100	26
04:38:21	DISCHG (GOOD)	NONE 100	26
04:39:29	DISCHG (GOOD)	NONE 100	26
04:40:27	DISCHG (GOOD)	NONE 100	26
04:41:32	DISCHG (GOOD)	NONE 100	26
04:42:52	DISCHG (GOOD)	NONE 99	27
04:43:32	DISCHG (GOOD)	NONE 99	27
04:44:32	DISCHG (GOOD)	NONE 99	27

Manage


The **Manage** window allows to remove or export logs.

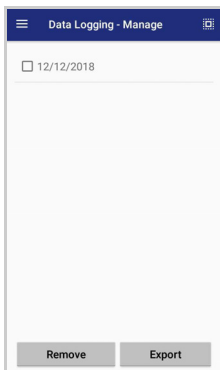

Select one or more logs and tap **Remove** to remove them. Tap **OK** to confirm:

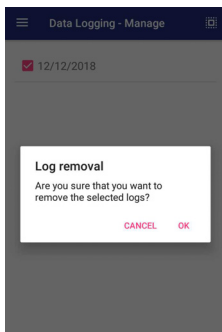

Select one or more logs and tap **Export** to export data and store them for extended periods. Tap **Allow** to confirm:

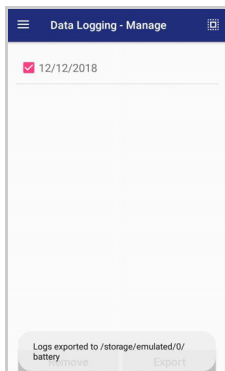


The selected log files will be saved in the "battery" folder in the internal storage of your device.

Application

Settings


The **Settings** section allows to set the value ranges that will be used to create the graphs.

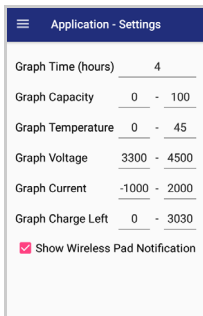

Graph Time (hours)	4
Graph Capacity	0 - 100
Graph Temperature	0 - 45
Graph Voltage	3300 - 4500
Graph Current	-1000 - 2000
Graph Charge Left	0 - 3030
<input checked="" type="checkbox"/> Show Wireless Pad Notification	

Info

The **Info** section displays information about the device name and the software version.

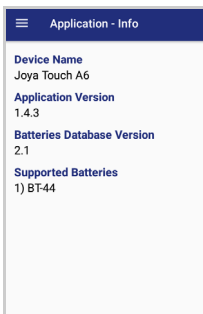

Device Name	Joya Touch A6
Application Version	1.4.3
Batteries Database Version	2.1
Supported Batteries	1) BT-44





If you charge the Joya Touch A6 with a wireless charging pad, you're not allowed to customize the charging profile.

If the **Show Wireless Pad Notification** check box is selected, the system displays a warning message saying that the charging profile won't be applied.


Show Wireless Pad Notification is enabled by default. To disable it, clear the **Show Wireless Pad Notification** check box.


DL Cradle Manager

This application provides information about the cradle you're currently using and allows to enable/disable some of its properties. Below are some screenshots showing the different cradle options:

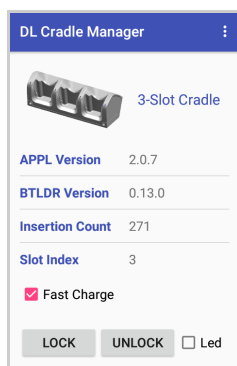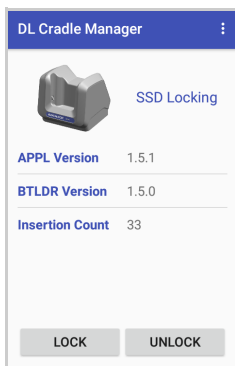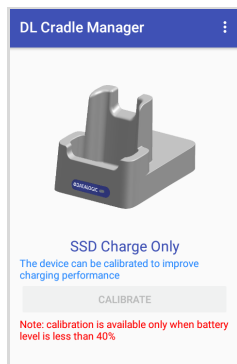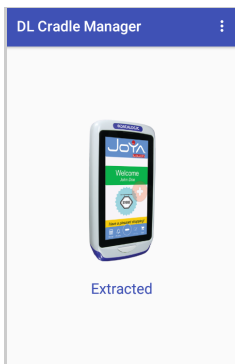


If the Joya Touch A6 is inserted into the Single Slot Dock Locking or into the 3-Slot Cradle, you can unlock and lock the device without using the unlock key, by tapping the **UNLOCK** and **LOCK** buttons.

In addition, you have further details and options. Tap the menu icon on the right top of the screen :

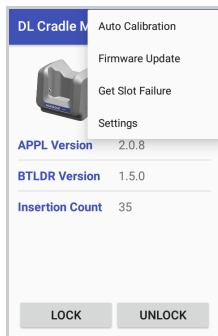


Auto Calibration

Tap to re-calibrate the cradle levers in case of a bad calibration failure notification (See [Single Slot Dock Locking LED Indicators](#) on page 19 and [3-Slot Cradle LED Indicators](#) on page 23).

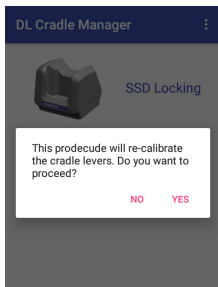

Firmware Update

The **DL Cradle Manager** window displays the cradle firmware version and the number of insertions made. Tap **Firmware Update** to update the firmware:

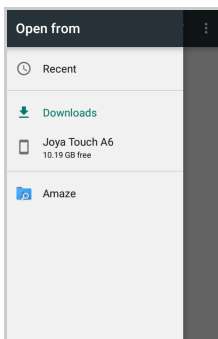


Get Slot Failure

In case of a failure notification, it displays the reason of the failure. (See [Single Slot Dock Locking LED Indicators](#) on page 19 and [3-Slot Cradle LED Indicators](#) on page 23).


Settings

Settings	
Unlock notification SSD Locking	
Wrong insertion timeout [ms] 2000	
Favourite cradle firmware Legacy mode	
Unlock timeout [s] 20	
Standby LED	<input type="checkbox"/>
Safer WLC inhibition	<input type="checkbox"/>


Unlock Notification

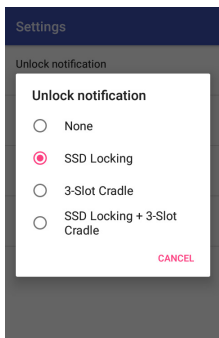

If enabled, it allows you to unlock the cradle from the Power Menu and the Status Bar:

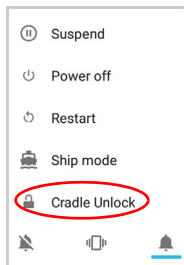


Power Menu



Status Bar


Wrong Insertion Timeout

You can set the time lapse after which a "wrong insertion" notification is sent. Tap **Wrong insertion timeout [ms]** and digit your desired insertion timeout:

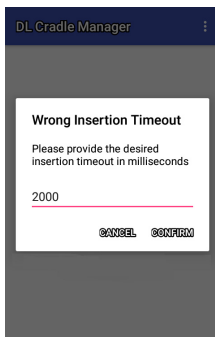


Favourite Cradle Firmware

Tap **Favourite cradle firmware** to select the cradle firmware:

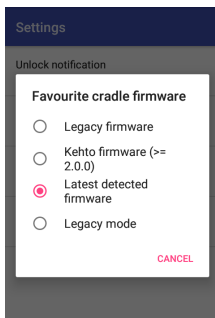

Unlock Timeout

You can set the time available to the user to unlock the cradle after tapping the **UNLOCK** button. Tap **Unlock timeout [s]** and digit your desired unlock timeout:

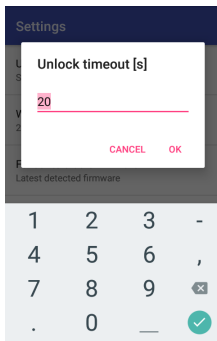

The 3-Slot Cradle screen has 3 more fields:

- **Slot Index** indicates the slot into which the device is inserted.
- **Fast Charge** is enabled by default. Clear the check box to reduce the charging speed of the slot.
- **Led** turns on the bottom LED anytime you unlock the device. It is disabled by default.

Standby LED

If enabled, when the dock is powered and no device is inserted, the Power On LED gives a short blink every few seconds. (See [Single Slot Dock Locking LED Indicators on page 19](#)).


This feature is only available in the Single Slot Dock Locking.

Safer WLC inhibition


If enabled, it inhibits the wireless charging when the lever is open.

DL Ringtone Editor

DL Ringtone Editor allows to create, edit and save your own ringtones and notifications.

Enter the name for the new ringtone in the **Ringtone Name** field and tap  to add the first note.

Set the note, the duration and the octave by selecting the desired options. You can also set the BPM and the style.

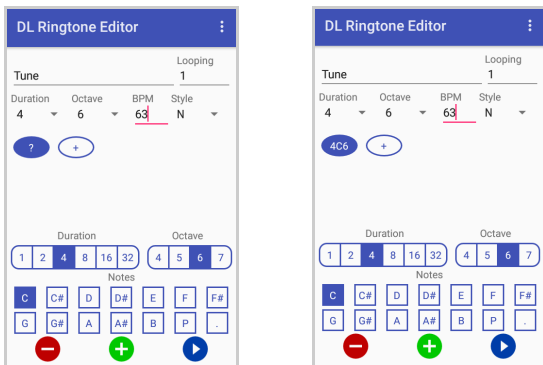

Repeat the procedure for each new note.


Tap  to remove a note.

Tap  to add a new note.

Tap  to play the ringtone.


Enter the number of loops in the **Looping** fields.

Tap the menu icon on the right top of the screen for more options:

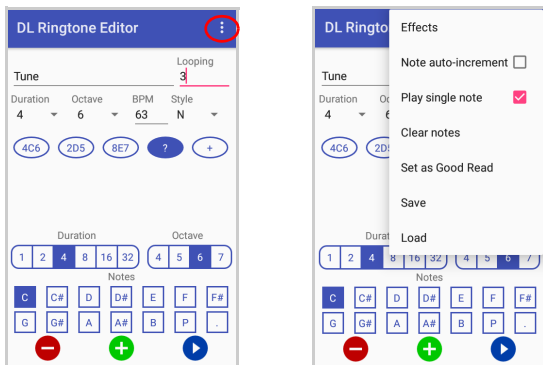

Effects

Allows to add the following effects to the ringtone:

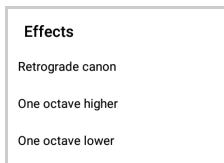

Note auto-increment

If enabled, you can add a new note without tapping the button .

Play single note

Select to play notes while editing.

Clear notes

Clears all the notes.

Set as Good Read

Set the ringtone as good read notification.

Save

When the ringtone is ready, tap **Save** on the menu list to save the ringtone. The audio file will be saved in the "Ringtones" folder in the internal storage of your device.

Load

Loads a file from the device's internal storage.

DL Stager

DL Stager is a configuration tool that uses special barcode labels. Contact our technical support for more details (see [Support Through the Website on page 197](#)).

Desktop Configuration Utility (DXU)


Datalogic DXU is a unified device configuration utility and firmware update utility. DXU can connect directly to the Joya Touch A6 that connects either directly to a PC via USB or remotely over a network via Wi-Fi. DXU reports information about currently connected devices.



Configure
devices



Save
Configurations

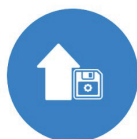

Upload
Configurations




Create
Scan Codes


For more details on DXU installation, configuration and functioning, visit the website: <https://datalogic.github.io/dxu/>.

Led Effects Editor


This application allows to create and save customized LED effects.

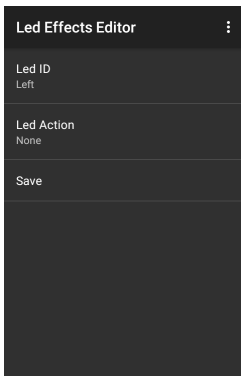


Tap **Led ID** to select the LED you want to assign to the effect.

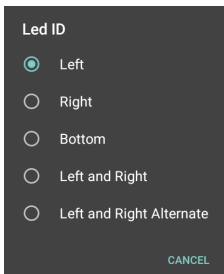

Tap **Led Action** to configure the LED behaviour.

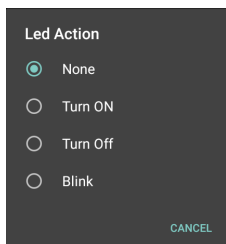

Tap **Save** to name and save the effect.

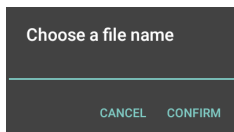

ProximityCalibrate

The proximity sensor measures the distance of a surface from the Joya Touch A6' data capture window (see the picture below).



ProximityCalibrate is a wizard that helps you to calibrate the sensor's distance measurement.

Scan2Deploy

Scan2Deploy is a configuration tool that uses special barcode labels.


For more details, visit the website:

<https://datalogic.github.io/dxu/scan2deploy/>.

SoftSpot™

Datalogic's SoftSpot technology is a user-definable "floating soft trigger" meant to provide easy access to the barcode scanner application and other frequently used functionalities on mobile scanning devices.

Tap the SoftSpot icon on the favorites tray or on the All Apps screen to launch SoftSpot:

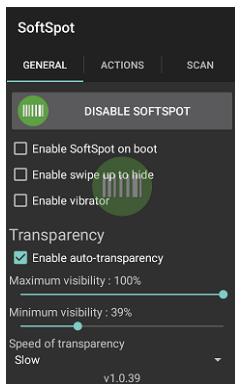

Tap the SoftSpot to scan barcodes.

Enable/Disable SoftSpot

Enables/disables the SoftSpot.

Enable SoftSpot on boot

Select it to enable SoftSpot on boot.

Enable swipe to hide

Allows to hide the SoftSpot from the screen by swiping it up in the Notification/Status bar.

Enable vibrator

Enables the vibrator.

Enable auto-transparency

If selected, the SoftSpot turns transparent automatically when it is not used.

Maximum visibility

Sets the SoftSpot transparency level when it is used or when the auto-transparency feature is not enabled.


Minimum visibility

Sets the SoftSpot transparency level when it is not used and the auto-transparency feature is enabled.

Speed of transparency

Sets the lapse of time it takes for the SoftSpot to turn transparent.

To enable the Continuous Scan mode and scan barcodes consecutively, tap **SCAN** and select the **Enable on double tap** check box:

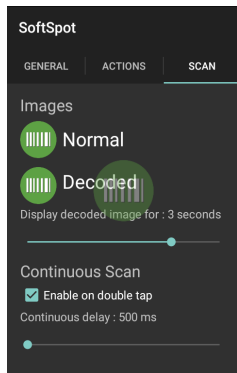

Then double-tap the SoftSpot. Tap one more time to stop laser emission.

You can also configure the SoftSpot from the DXU. For more details on DXU, see [Desktop Configuration Utility \(DXU\)](#) on page 128.

NOTES



Tools

USB ADB Driver & USB CD-ROM

USB connection allows to read and write files on both the internal storage memory and the external storage memory, but doesn't allow to install applications.

Android Debug Bridge (ADB) is a command-line utility included with Google's Android SDK and you can use it to control your device over USB from a computer, copy files back and forth, install and uninstall apps and run shell commands.

Use the USB CD-ROM to install the Windows drivers and then launch ADB to run a shell using the following tool command prompt:
Start/Datalogic Android/Support/Device.

SDK Add-on

SDK add-on is a library which extends the Android SDK and development tools.

For more information and instructions to install SDK Add-on, Android™ Studio and Android SDK, visit the website <https://datalogic.github.io/quick-start/>.

Install ADB Driver


1. Install Android SDK Manager (visit the website <https://datalogic.github.io/quick-start/> for further information).
2. Download and install the Google USB Driver (see <https://developer.android.com> for further information).



Before installing the Google USB Driver, ensure you have installed the Datalogic plug-in.

NOTE

3. In order to use ADB with your device connected over USB, you must enable USB debugging in the device system settings. To enable Android **Developer options**, go to **Settings > Device info** and tap on the **Build Number** section 7 times. After the 7th tap, the Developer options will be unlocked and available. Go back to **Settings** and tap **Developer options**. Select **USB debugging**:

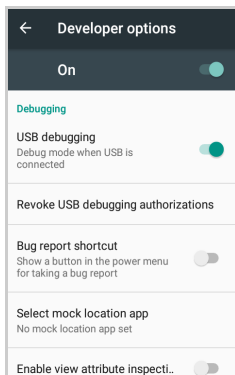

4. Use a CD-Rom Installer to debug the ADB driver and read the Joya Touch A6 as an ADB device.

Create a New Application with Android Studio

For information and instructions to configure Datalogic SDK Add-on in Android Studio, refer to the website

<https://datalogic.github.io/quick-start/android-studio.html>.

Datalogic SDK

For information on the Datalogic SDK APIs, visit the web site:

<https://datalogic.github.io/android-sdk-docs/reference/packages.html>.

Avalanche

Avalanche is an infrastructure and mobile device management system. From a central console, you can locate and manage devices, including monitoring and distributing software and firmware. Network security features allow you to manage wireless settings (including encryption and authentication), and apply those settings on demand throughout the network. Avalanche also provides tools for managing maps, alerts, and reports.

For further details, refer to the Ivanti website:

<https://www.ivanti.com/support/product-documentation>.

CSIPSimple

CSipSimple is a Voice over Internet Protocol (VoIP) application for Google Android operating system using the Session Initiation Protocol (SIP). For more details, visit the website:

<http://www.voipvoip.com/android/csipsimple.html>.

SureLock

With **SureLock** you can secure and lock the Joya Touch A6 to ensure its responsible usage, improve productivity and reduce maintenance cost.

It allows access to only required applications and prevents the users from making any intended or unintended changes in the device. Only administrators can access the password protected settings to either modify lockdown configurations or exit the lockdown.

You can use DXU Desktop to remotely accept the SureFox and SureLock EULAs for all devices consuming a.dxu configuration file.

A Datalogic Standard version of **SureLock** is preloaded on the Joya Touch A6. You have the option to upgrade to the Advanced version by contacting 42Gears: <http://www.42gears.com/contact.html>.

Refer to the [SureLock Documentation for Android](#) on the 42Gears website for further details on **SureLock**.

SureFox

Businesses require use of browsers to run web applications on devices with Android and there may be situations when controlled web access for the users is required to ensure appropriate use of the devices.

SureFox creates locked browsing environment in your devices with Android making them apt for deployments as public web kiosks or as field devices for your mobile workforce. You can specify the websites that you wish to allow. **SureFox** will then block all other websites and allow the users to browse the allowed websites in locked down kiosk mode.

You can use DXU Desktop to remotely accept the SureFox and SureLock EULAs for all devices consuming a.dxu configuration file.

A Datalogic Standard version of **SureFox** is preloaded on the Joya Touch A6. You have the option to upgrade to the Advanced version by contacting 42Gears: <http://www.42gears.com/contact.html>.

Refer to the [SureFox Documentation for Android](#) on the 42Gears website for further details on **SureFox**.

MobiControl

SOTI MobiControl is an enterprise mobility management solution that secures and manages the Joya Touch A6 throughout its entire lifecycle, from deployment to retirement. It controls all aspects of business mobility — tracking physical assets, managing applications and content, as well as keeping the device and the data safe and secure.

For further details, refer to the SOTI website:

<https://www.soti.net/products/mobicontrol>.

NOTES



Data Capture

The Joya Touch A6 has an integrated imager that collects data by scanning barcodes.

See [Scanner Settings](#) on page 66 for instructions on configuring the scanner settings.

Imager Data Capture

The imager uses digital camera technology to take a digital picture of a barcode, the image is stored in memory and software decoding algorithms are executed to extract the data from the image. The omni-directional scanning does not require that the operator orient the barcode to align with the scan pattern.

To scan a barcode symbol:

1. Point the scan window at the barcode from a distance within the reading range.
2. Press the Scan Key or the Scan Trigger. The imager projects a laser aiming pattern similar to those used on cameras. The aiming pattern is used to position the barcode or object within the field of view.



3. Center the symbol in any orientation within the aiming pattern. Ensure the entire symbol is within the rectangular area formed by the brackets in the aiming pattern, then either wait for the timeout or release the Scan Key to capture the image. A red beam illuminates the symbol, which is captured and decoded.

Linear Bar Code



2D Matrix Symbol



If the scan has been successful:

- If enabled, the good read LED turns on (see [LED Indicators on page 51](#) and [Led Notifications on page 62](#)).

- If enabled, the good read beep plays.
- If enabled, the Green Spot projects a green spot onto the barcode image.
- The barcode type and content data display on the screen.

The field of view changes its size as you move the reader closer or farther away from the barcode. The aiming pattern is smaller when the imager is closer to the barcode and larger when it is farther from the barcode.

Scan symbols with smaller bars or elements (mil size) closer to the unit and those with larger bars or elements (mil size) farther from the unit. Hold the Joya Touch A6 between two and nine inches (depending on symbol density) from the symbol, centering the aiming pattern cross hairs on the symbol.

NOTES



Connections

USB Connection

USB Direct Connection

You can use any standard micro USB cable to directly connect the Datalogic Joya Touch A6 to a host computer to transfer data through the USB interface.


Host
Computer



Joya Touch A6




Standard Micro USB
cable type USB A –
micro USB B



Connection through the cable complies to USB 2.0 standard.



To enable file transfer after you connected your device, scroll down the notification bar and tap the **USB charging this device** notification:

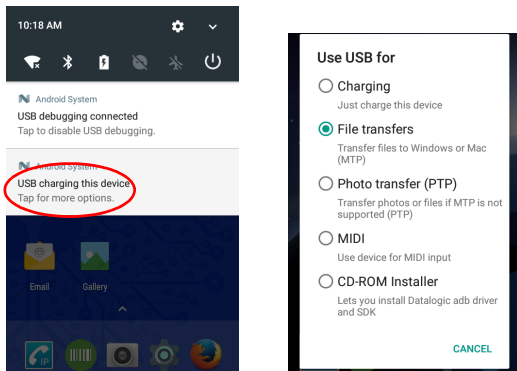

Tap **File transfers** if you want to transfer all types of media to and from the Joya Touch A6, or tap **Photo transfer (PTP)** if you just want to transfer the pictures.

Wi-Fi Connection

The Joya Touch A6 Wi-Fi 802.11 a/b/g/n radio models can communicate with the host using the on-board radio frequency component and an Access Point connected to the host computer. To launch this utility you can tap the specific icon if it's visible on the taskbar or you can open Connections folder or Control Panel from desktop.

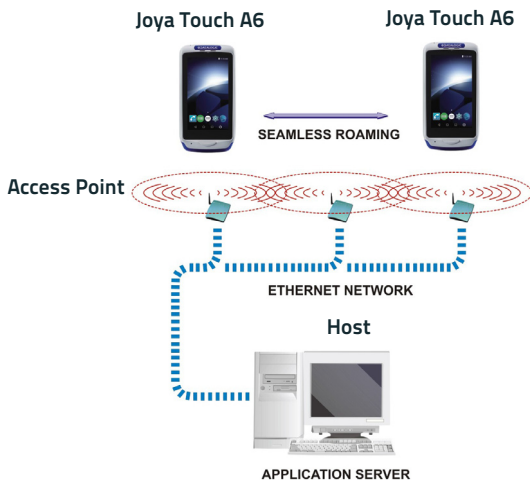

Wi-Fi module is on by default, in order to avoid wasting energy, you can switch it off using the Wireless Communications applet.



NOTE

Suspending the terminal powers off the 802.11 a/b/g/n radio and drops the radio connection. When the terminal resumes, depending on the radio power mode and security protocol selected, it may take up to 30 seconds for the 802.11 a/b/g/n radio driver to re-associate the radio to the network.



NOTE

Area coverage and radio performance may vary, due to environmental conditions, access point types or interference caused by other devices (microwave ovens, radio transmitters, etc.).

Bluetooth® Serial Connection

Joya Touch A6 models can communicate with a Bluetooth® printer, using the on-board Bluetooth® module.



NOTE

Bluetooth® is only available in Joya Touch A6 plus models.



NOTE

In order to extend battery life, the Bluetooth® module is off by default. If you need to have Bluetooth® working, the module must be powered on.



NOTE

Suspending the terminal powers off the Bluetooth® radio and drops the Bluetooth® connection. When the terminal resumes, it takes approximately 10 seconds for the Bluetooth® radio driver to re-initialize the radio.



NOTE

Area coverage and Bluetooth® radio performance may vary, due to environmental conditions or interference caused by other devices (microwave ovens, radio transmitters, etc.).

Wireless and Radio Frequencies Warnings



WARNING

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or attachments could damage the product and may violate laws and regulations.

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals generated by Joya Touch A6.

Datalogic recommends persons with pacemakers or other medical devices to follow the same recommendations provided by Health Industry Manufacturers Associations for mobile phones.

Persons with pacemakers:

- Should ALWAYS keep this device more than twenty five (25) cm from their pacemaker and/or any other medical device;
- Should not carry this device in a breast pocket;
- Should keep the device at the opposite side of the pacemaker and/or any other medical device;
- Should turn this device OFF or move it immediately AWAY if there is any reason to suspect that interference is taking place.
- Should ALWAYS read pacemaker or any other medical device guides or should consult the manufacturer of the medical device to determine if it is adequately shielded from external RF energy.

In case of doubt concerning the use of wireless devices with an implanted medical device, contact your doctor.



WARNING

Turn this device **OFF** in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.



WARNING

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.



WARNING

An air bag inflates with great force. **DO NOT** place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If a vehicle's wireless equipment is improperly installed and the air bag inflates, serious injury could result.

**WARNING**

Turn off the device when in any area with a potentially explosive atmosphere. Observe restrictions and follow closely any laws, regulations, warnings and best practices on the use of radio equipment near fuel storage areas or fuel distribution areas, chemical plants or where any operation involves use of explosive materials.

Do not store or carry flammable liquids, explosive gases or materials with the device or its parts or accessories.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked or shown.

Sparks in such areas could cause an explosion or fire, resulting in injury or even death.

NOTES



Technical Features

Technical Data

Physical Characteristics	
Colors (standard)	Enclosures: White Battery Covers: Blue
Color Customization	Topcase and battery covers (both handheld and pistol grip models), and Scan Trigger (pistol grip models) are available in various standard or custom colors
Display	4.3 inch full touch TFT-LCD color display; FWVGA: 854 x 480 pixels; 16M colors, LED backlight
Touch Screen	Capacitive, multi-touch, Gorilla® Glass 3
Physical Keys	Handheld: Scan fully programmable key Pistol Grip: Scan key and scan trigger, both fully programmable
Lighting	Software programmable, lights at the bottom of the battery cover
Dimensions	Handheld: 14.5 x 7.7 x 3.4 cm / 5.7 x 3.0 x 1.3 in Pistol Grip: 14.5 x 7.7 x 11.6 cm / 5.7 x 3.0 x 4.5 in
Weight (with battery)	Handheld: 275.0 g / 9.7 oz Pistol Grip: 305.0 g / 10.7 oz

Electrical	
Battery	Replaceable battery pack with rechargeable Li-Ion batteries; 3.7 V; 3,030 mAh (11.3 Watt-hours)
Wireless Charging	Six charging profiles
Environmental	
Chemical Resistance	Isopropyl Alcohol, Hydrogen Peroxide, Clorox® Bleach, Super Sani-Cloth; applicable for both the device and cradles
Drop Resistance	Withstands repeated drops from 1.2 m / 4.0 ft onto plywood and 1.5 m / 5.0 ft onto plywood with the rubber boot accessory
Temperature	Operating: -10 to 50°C / 14 to 122°F
Interfaces	
Interfaces	USB 2.0 device (with standard Micro-USB connector)
User Interfaces	
Accelerometer	3-Axis accelerometer
SoftSpot Technology	Virtual trigger/Scan Key
Trigger	Pistol grip models only
Vibration	Software programmable - Haptic Effects
Software	
Configuration and Maintenance	Datalogic X Platform Configuration Utility (DXU)
Development	Java and Xamarin SDK available

System	
Memory	System RAM: 2 GB; System Flash: 16 GB Flash Disk
CPU	Qualcomm Snapdragon 210
Operating System	Google Android 7.1.2 Nougat
Wireless Communications	
Local Area Network (WLAN)	IEEE 802.11 a/b/g/n; Wi-Fi Security Standards: WEP, WPA/WPA2 PSK, 802.1x EAP Methods: PEAP/MSCHAPV2, PEAP/GTC, TLS, TTLS/PAP, TTLS/MSCHAP, TTLS/MSCHAPV2, TTLS/GTC, PWD
Personal Area Network (WPAN)	Bluetooth® wireless technology v4.0 - Dual Mode (Classic Bluetooth wireless technology and BLE available)
NFC Communication	NFC communication between device and cradle
Decoding Capability	
1D / Linear Codes	Auto discriminates all standard 1D codes including GS1 DataBar™ and ISBT-128 linear codes
2D Codes	Aztec Code, Data Matrix, MaxiCode, PDF417, MicroPDF417, Micro QR Code, QR Code, DotCode
Postal Codes	Australian Post, Japanese Post, KIX Code, Royal Mail, USPS Intelligent Mail, USPS PLANET, USPS POSTNET
Digital Watermarks	Supports Digimarc® Barcode

Reading Performance		
	HALOGEN DE2011-DL (WVGA resolution, Driver's License models)	HALOGEN DE2012-SR (1 MP, Standard Range models)
Image Sensor	WVGA: 752 x 480 pixels	1MP: 1280 x 960 pixels
Typical Depth of Field Minimum distance determined by symbol length and scan angle. Printing resolution, contrast, and ambient light dependent.	1D barcode 5.0 mils: 6.5 to 21.0 cm / 2.6 to 8.2 in 1D barcode 13.0 mils: 5.5 to 39.0 cm / 2.2 to 15.2 in Data Matrix 15.0 mils: 4.0 to 25.0 cm / 1.6 to 9.8 in	1D barcode 5.0 mils: 10.0 to 33.0 cm / 3.9 to 13.0 in 1D barcode 13.0 mils: 5.0 to 65.0 cm / 2.0 to 25.6 in Data Matrix 15.0 mils: 8.0 to 35.0 cm / 3.1 to 13.8 in
Minimum Resolution	Linear codes at 3 mils; 2D codes at 5 mils	Linear codes at 3 mils; 2D codes at 6,6 mils
Light Source	Illumination: White or red LEDs (depending on model) Aiming: 650 nm VLD	
Reading Indicators	Loudspeaker (Polyphonic); Datalogic's patented "Green Spot" technology for visual good-read feedback; Vibrator; Good read LED	
Print Contrast Minimum	25%	
Scanning Angles	Pitch: $\pm 60^\circ$; Skew: $\pm 60^\circ$; Roll: up to $\pm 180^\circ$	

Safety & Regulatory	
Agency Approvals	The product meets necessary safety and regulatory approvals for its intended use
Enviromental Compliance	Complies to EU RoHS
Warranty	
Warranty	1-Year Factory Warranty

NOTES



Test Codes


High Density Codes - 0.25 mm (10 mils)

Code 39



17162

Interleaved 2/5

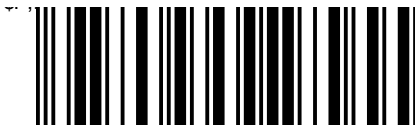

0123456784

Code 128



test

High Density Codes (continued) - 0.25 mm (10 mils)

80%

EAN 13



80%

EAN 8



Medium Density Codes - 0.38 mm (15 mils)

Code 39



17162

Interleaved 2/5



0123456784

Code 128



test

Medium Density Codes (continued) - 0.38 mm (15 mils)

100%

EAN 13



100%

EAN 8



Low Density Codes - 0.50 mm (20 mils)

Code 39



17162

Interleaved 2/5



0123456784

Code 128



test

Low Density Codes (continued) - 0.50 mm (20 mils)

120%

EAN 13



120%

EAN 8



2D Codes

Datamatrix ECC200



Example

Inverse Datamatrix ECC200



Example

NOTES



Maintenance

Cleaning the Device

Periodically clean the Joya Touch A6 device, the Joya Touch Single Slot Docking and the Joya Touch 3-Slot Cradle using a soft cloth slightly dampened with only water, or alternatively with Isopropyl Alcohol (70%), Bleach (diluted 10:1) or Hydrogen Peroxide (stabilized, 3%).

Please note that both Bleach and Hydrogen Peroxide may damage your device if you don't use the correct dilution.

Do not use any other cleaning agents (e.g. different alcohol, abrasive or corrosive products, solvents) or abrasive pads to clean the device.

Do not spray or pour liquids directly onto the device.

The device is not water resistant. Keep it dry.

Ergonomic Recommendations




In order to avoid or minimize the potential risk of ergonomic injury follow the recommendations below. Consult with your local Health & Safety Manager to ensure that you are adhering to your company's safety programs to prevent employee injury.

- Reduce or eliminate repetitive motion
- Maintain a natural position
- Reduce or eliminate excessive force
- Keep objects that are used frequently within easy reach
- Perform tasks at correct heights
- Reduce or eliminate vibration
- Reduce or eliminate direct pressure
- Provide adjustable workstations
- Provide adequate clearance
- Provide a suitable working environment
- Improve work procedures.



Safety and Regulatory Information



Read this manual carefully before performing any type of connection to the Joya Touch A6.

The user is responsible for any damage caused by incorrect use of the equipment or by inobservance of the indication supplied in this manual.

General Safety Rules

- Before using the device and the battery pack, read carefully the chapter [Battery](#) on page 15.
- Use only the components and accessories supplied by the manufacturer for the specific Joya Touch A6 being used.
- Do not attempt to disassemble the Joya Touch A6, as it does not contain parts that can be repaired by the user. Any tampering will invalidate the warranty.
- When replacing the battery pack or at the end of the operative life of the Joya Touch A6, disposal must be performed in compliance with the laws in force in your jurisdiction.
- Do not submerge the Joya Touch A6 in liquid products.
- For further information or support, refer to this manual and to the Datalogic web site: www.datalogic.com.

Power Supply

The device is intended to be supplied by a self-contained rechargeable Lithium Ion battery pack (UL listed LPS/SELV power source) and/or by UL Listed/CSA Certified Power Unit LPS/SELV power source which supplies power directly to the unit via the micro USB connector of the cable.

The device could be also used with Certified Accessories (Dock/Cradle) which supply Wireless power. The Dock/Cradle accessories are intended to be supplied by a UL Listed/CSA Certified Power Unit LPS/SELV rating 12V, min 5A power source which supplies power via the power connector of the cable.

Any changes or modifications to equipment, not expressly approved by Datalogic could void the user's authority to operate the equipment.

Laser Safety

The following information applies to Laser Aiming System, used on Joya Touch A6 Imager.

The laser light is visible to the human eye and is emitted from the window indicated in the figure below.

LASER LIGHT - DO NOT STARE INTO BEAM

CLASS 2 LASER PRODUCT

MAX OUTPUT RADIATION 1 mW

COMPLIANT WITH EN 60825-1:2007 and EN 60825-1:2014



The artwork below may be only a draft. Please refer to the label attached to the product for information about certification marks.



ITALIANO	DEUTSCH	FRANÇAIS	ESPAÑOL
<p>LA LUCE LASER È VISIBILE ALL'OCCHIO UMANO E VIENE EMESSA DALLA FINESTRA INDICATA NELLA FIGURA.</p>	<p>DIE LASER-STRAHLUNG IST FÜR DAS MENSCHLICHE AUGE SICHTBAR UND WIRD AM STRAHLAUS TRITTSFENSTER AUSGESENDET (SIEHE BILD)</p>	<p>LE RAYON LASER EST VISIBLE À L'OEIL NU ET IL EST ÉMIS PAR LA FENÊTRE DÉSIGNÉE SUR L'ILLUSTRATION DANS LA FIGURE</p>	<p>A LUZ LÁSER ES VISIBLE AL OJO HUMANO Y ES EMITIDA POR LA VENTANA INDICADA EN LA FIGURA.</p>
<p>LUCE LASER NON FISSARE IL FASCIO APPARECCHIO LASER DI CLASSE 2 MASSIMA POTENZA MEDIA DI USCITA: 1 mW LUNGHEZZA D'ONDA EMESSA: 630-680 nm CONFORME A EN 60825-1 (2007) e EN 60825-1:2014.</p>	<p>LASERSTRAHLUNG NICHT IN DER STRAHL BLINKEN PRODUKT DER LASERKLASSE 2 MAXIMALE DURCHSCHNITTLICHE AUSGANGLEISTUNG: 1 mW WELLENLÄNGE: 630-680 nm ENTSPR. EN 60825-1 (2007) und EN 60825-1:2014.</p>	<p>RAYON LASER EVITER DE REGARDER LE RAYON APPAREIL LASER DE CLASSE 2 MAXIMUM PUISSANCE MOYENNE DE SORTIE: 1 mW LONGUER D'ONDE EMISE: 630-680 nm CONFORME A EN 60825-1 (2007) et EN 60825-1:2014.</p>	<p>RAYO LÁSER NO MIRAR FIJO EL RAYO APARATO LÁSER DE CLASE 2 MÁXIMA POTENCIA MEDIA DE SALIDA: 1 mW LONGITUD DE ONDA EMITIDA: 630-680 nm CONFORME A EN 60825-1 (2007) y EN 60825-1:2014.</p>

ENGLISH

The following information is provided to comply with the rules imposed by international authorities and refers to the correct use of your device.

STANDARD LASER SAFETY REGULATIONS

This product conforms to the applicable requirements of both CDRH 21 CFR 1040 and EN 60825-1 at the date of manufacture.

For installation, use and maintenance, it is not necessary to open the device.



WARNING

Do not attempt to open or otherwise service any components in the optics cavity. Opening or servicing any part of the optics cavity by unauthorized personnel may violate laser safety regulations. The optics system is a factory only repair item.



WARNING

Use of controls or adjustments or performance of procedures other than those specified herein may result in exposure to hazardous visible laser light.

The product utilizes a low-power laser diode. Although staring directly at the laser beam momentarily causes no known biological damage, avoid staring at the beam as one would with any very strong light source, such as the sun. Avoid shining laser light into any person's eye, even through reflective surfaces such as mirrors, etc.



WARNING

Use of optical systems with the scanner will increase eye hazard. Optical instruments include binoculars, microscopes, eye glasses and magnifying glasses.

ITALIANO

Le seguenti informazioni vengono fornite dietro direttive delle autorità internazionali e si riferiscono all'uso corretto del terminale.

NORMATIVE STANDARD PER LA SICUREZZA LASER

Questo prodotto risulta conforme alle normative vigenti sulla sicurezza laser alla data di produzione: CDRH 21 CFR 1040 e EN 60825-1.

Non si rende mai necessario aprire l'apparecchio per motivi di installazione, utilizzo o manutenzione



ATTENZIONE

Non tentare di accedere allo scomparto contenete i componenti ottici o di farne la manutenzione.

L'apertura dello scomparto, o la manutenzione di qualsiasi parte ottica da parte di personale non autorizzato, potrebbe violare le norme della sicurezza. Il sistema ottico può essere riparato solamente alla fabbrica.



ATTENZIONE

L'utilizzo di procedure o regolazioni differenti da quelle descritte nella documentazione può provocare un'esposizione pericolosa a luce laser visibile.

Il prodotto utilizza un diodo laser a bassa potenza. Sebbene non siano noti danni riportati dall'occhio umano in seguito ad una esposizione di breve durata, evitare di fissare il raggio laser così come si eviterebbe qualsiasi altra sorgente di luminosità intensa, ad esempio il sole. Evitare inoltre di dirigere il raggio laser negli occhi di un osservatore, anche attraverso superfici riflettenti come gli specchi.



ATTENZIONE

L'uso di strumenti ottici assieme allo scanner può aumentare il pericolo di danno agli occhi. Tali strumenti ottici includono cannocchiali, microscopi, occhiali e lenti di ingrandimento.

DEUTSCH

Die folgenden Informationen stimmen mit den Sicherheitshinweisen überein, die von internationalen Behörden auferlegt wurden, und sie beziehen sich auf den korrekten Gebrauch vom Terminal.

NORM FÜR DIE LASERSICHERHEIT

Dies Produkt entspricht am Tag der Herstellung den gültigen EN 60825-1 und CDRH 21 CFR 1040 Normen für die Lasersicherheit.

Es ist nicht notwendig, das Gerät wegen Betrieb oder Installations-, und Wartungs-Arbeiten zu öffnen.



ACHTUNG

Unter keinen Umständen darf versucht werden, die Komponenten im Optikhohlraum zu öffnen oder auf irgendwelche andere Weise zu warten. Das Öffnen bzw. Warten der Komponenten im Optikhohlraum durch unbefugtes Personal verstößt gegen die Laser-Sicherheitsbestimmungen. Das Optiksyst \ddot{u} m darf nur werkseitig repariert werden.



ACHTUNG

Jegliche Änderungen am Gerät sowie Vorgehensweisen, die nicht in dieser Betriebsanleitung beschreiben werden, können ein gefährliches Laserlicht verursachen.

Der Produkt benutzt eine Laserdiode. Obwohl zur Zeit keine Augenschäden von kurzen Einstrahlungen bekannt sind, sollten Sie es vermeiden für längere Zeit in den Laserstrahl zu schauen, genauso wenig wie in starke Lichtquellen (z.B. die Sonne). Vermeiden Sie es, den Laserstrahl weder gegen die Augen eines Beobachters, noch gegen reflektierende Oberflächen zu richten.



ACHTUNG

Die Verwendung von Optiksyst \ddot{u} men mit diesem Scanner erhöht die Gefahr einer Augenbeschädigung. Zu optischen Instrumenten gehören unter anderem Ferngläser, Mikroskope, Brillen und Vergrößerungsgläser.

FRANÇAIS

Les informations suivantes sont fournies selon les règles fixées par les autorités internationales et se réfèrent à une correcte utilisation du terminal.

NORMES DE SECURITE LASER

Ce produit est conforme aux normes de sécurité laser en vigueur à sa date de fabrication: CDRH 21 CFR 1040 s et EN 60825-1.

Il n'est pas nécessaire d'ouvrir l'appareil pour l'installation, l'utilisation ou l'entretien.



ATTENTION

Ne pas essayer d'ouvrir ou de réparer les composants de la cavité optique. L'ouverture de la cavité optique ou la réparation de ses composants par une personne non qualifiée peut entraîner le nonrespect des règles de sécurité relatives au laser. Le système optique ne peut être réparé qu'en usine.



ATTENTION

L'utilisation de procédures ou réglages différents de ceux donnés ici peut entraîner une dangereuse exposition à lumière laser visible.

Le produit utilise une diode laser. Aucun dommage aux yeux humains n'a été constaté à la suite d'une exposition au rayon laser. Eviter de regarder fixement le rayon, comme toute autre source lumineuse intense telle que le soleil. Eviter aussi de diriger le rayon vers les yeux d'un observateur, même à travers des surfaces réfléchissantes (miroirs, par exemple).



ATTENTION

L'utilisation d'instruments optiques avec le scanner augmente le danger pour les yeux. Les instruments optiques comprennent les jumelles, les microscopes, les lunettes et les verres grossissants.

ESPAÑOL

Las informaciones siguientes son presentadas en conformidad con las disposiciones de las autoridades internacionales y se refieren al uso correcto del terminal.

NORMATIVAS ESTÁNDAR PARA LA SEGURIDAD LÁSER

Este aparato resulta conforme a las normativas vigentes de seguridad láser a la fecha de producción: CDRH 21 CFR 1040 y EN 60825-1.

No es necesario abrir el aparato para la instalación, la utilización o la manutención.



ATENCIÓN

No intente abrir o de ninguna manera dar servicio a ninguno de los componentes del receptáculo óptico. Abrir o dar servicio a las piezas del receptáculo óptico por parte del personal no autorizado podría ser una violación a los reglamentos de seguridad. El sistema óptico se puede reparar en la fábrica solamente.



ATENCIÓN

La utilización de procedimientos o regulaciones diferentes de aquellas descritas en la documentación puede causar una exposición peligrosa a la luz láser visible.

El aparato utiliza un diodo láser a baja potencia. No son notorios daños a los ojos humanos a consecuencia de una exposición de corta duración. Eviten de mirar fijo el rayo láser así como evitarían cualquiera otra fuente de luminosidad intensa, por ejemplo el sol. Además, eviten de dirigir el rayo láser hacia los ojos de un observador, también a través de superficies reflectantes como los espejos.



ATENCIÓN

El uso de sistemas ópticos con el escáner aumentará el riesgo de daños oculares. Los instrumentos ópticos incluyen binoculares, microscopios, lentes y lupas.

LED Class

LED illuminator integrated in the imager engine is classified as 'EXEMPT RISK GROUP' according to IEC62471.

Marking and European Economic Area (EEA)

In radio systems configured with mobile computers and access points, the frequencies to be used must be allowed by the spectrum authorities of the specific country in which the installation takes place. Be absolutely sure that the system frequencies are correctly set to be compliant with the spectrum requirements of the country. The Radio modules used in this product automatically adapt to the frequencies set by the system and do not require any parameter settings.

Simplified EU Declaration of Conformity

Hereby, Datalogic S.r.l. declares that the radio equipment type Joya Touch A6 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.datalogic.com.

Statement of Compliance

cs Česky [Czech]	Datalogic S.r.l. tímto prohlašuje, že tento Joya Touch A6 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU - 2011/65/EU.
da Dansk [Danish]	Undertegnede Datalogic S.r.l. erklærer herved, at følgende udstyr Joya Touch A6 overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU - 2011/65/EU.
de Deutsch [German]	Hiermit erkläre Datalogic S.r.l., dass sich das Gerät Joya Touch A6 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU - 2011/65/EU befindet.
et Eesti [Estonian]	Käesolevaga kinnitab Datalogic S.r.l. seadme Joya Touch A6 vastavust direktiivi 2014/53/EU - 2011/65/EU põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
en English	Hereby, Datalogic S.r.l. declares that Joya Touch A6 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and 2011/65/EU.
es Español [Spanish]	Por medio de la presente Datalogic S.r.l. declara que el Joya Touch A6 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/EU - 2011/65/EU.

el Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Datalogic S.r.l. ΔΗΛΩΝΕΙ ΟΤΙ Joya Touch A6 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU - 2011/65/EU.
fr Français [French]	Par la présente Datalogic S.r.l. déclare que l'appareil Joya Touch A6 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU - 2011/65/EU.
it Italiano [Italian]	Con la presente Datalogic S.r.l. dichiara che questo Joya Touch A6 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/EU - 2011/65/EU.
Latviski [Latvian]	Ar šo Datalogic S.r.l. deklare, ka Joya Touch A6 atbilst Direktīvas 2014/53/EU - 2011/65/EU būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo Datalogic S.r.l. deklaruoja, kad šis Joya Touch A6 atitinka esminius reikalavimus ir kitas 2014/53/EU - 2011/65/EU Direktyvos nuostatas.
nl Nederlands [Dutch]	Hierbij verklaart Datalogic S.r.l. dat het toestel Joya Touch A6 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU - 2011/65/EU.
mt Malti [Maltese]	Hawnhekk, Datalogic S.r.l., jiddikjara li dan Joya Touch A6 jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 2014/53/EU - 2011/65/EU.
hu Magyar [Hungarian]	Alulírott, Datalogic S.r.l. nyilatkozom, hogy a Joya Touch A6 megfelel a vonatkozó alapvető követelményeknek és az 2014/53/EU - 2011/65/EU irányelv egyéb előírásainak.
pl Polski [Polish]	Niniejszym Datalogic S.r.l. oświadczam, że Joya Touch A6 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/53/EU - 2011/65/EU.
pt Português [Portuguese]	Datalogic S.r.l. declara que este Joya Touch A6 está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/EU - 2011/65/EU.

sl Slovensko [Slovenian]	Datalogic S.r.l. izjavlja, da je ta Joya Touch A6 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 2014/53/EU - 2011/65/EU.
Slovenský [Slovak]	Datalogic S.r.l. týmto vyhlasuje, že Joya Touch A6 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53/EU - 2011/65/EU.
fi Suomi [Finnish]	Datalogic S.r.l. vakuuttaa täten että Joya Touch A6 tyyppinen laite on direktiivin 2014/53/EU - 2011/65/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
sv Svenska [Swedish]	Härmed intygar Datalogic S.r.l. att denna Joya Touch A6 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU - 2011/65/EU.

Information for the User



Restrictions of use in all EU Countries. This device is restricted to indoor use when operated in the 5.15 to 5.25 GHz frequency range.

Radiofrequency Radiation Exposure Information

This device was tested for handheld and body-worn conditions, according to international Standards covering human exposure to electromagnetic fields from radio devices.

More information about the relevant Standards for SAR measurement methods and procedures may be found in the CE DoC included in the product user manual available at www.datalogic.com website and at the FCC public listing www.fcc.gov under the FCC IDs specified in the FCC/IC labeling section.

Europe

This device is compliant with SAR limits for general population/uncontrolled exposure specified in Council Recommendation 1999/519/EC Annex II.

US and Canada

For body worn operation, this device has been tested and meets the FCC/ISED RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 0 cm from the body. Use of other enhancements may not ensure compliance with FCC/ISED RF exposure guidelines.

Cet équipement peut être installé et utilisé à une distance minimale de 0 cm entre le radiateur et votre corps.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter, expect those approved under the filing.

Radio Technologies and Frequency Bands

Joya Touch A6 incorporates the following radio technologies and supports the corresponding Frequencies and Radio-Frequency transmitted power, as specified below:

Europe

Radio Technology	Frequency Bands	Max Radio-Frequency Transmitted Power
WLAN IEEE 802.11b/g/n (HT-20)	2.4GHz Frequency Bands: 2.412 - 2.472 MHz	18.64 dBm
WLAN IEEE 802.11a/n (HT-20)	5GHz Frequency Bands: 5.180 - 5.240 MHz 5.260 - 5.320 MHz 5.500 - 5.700 MHz	18.62 dBm
Bluetooth V4.0 - EDR/LE	2402 - 2480 MHz	9.14 dBm

US and Canada

Radio Technology	Frequency Bands
WLAN IEEE 802.11b/g/n (HT-20)	2.4GHz Frequency Bands: 2.412 - 2.462 MHz
WLAN IEEE 802.11a/n (HT-20)	5GHz Frequency Bands: 5.180 - 5.240 MHz 5.260 - 5.320 MHz 5.500 - 5.700 MHz 5.735 - 5.825 MHz
Bluetooth V4.0 - EDR/LE	2402 - 2480 MHz

FCC/IC Labeling

Handheld variants with WLAN+BT radios	Pistol Grip variants with WLAN+BT radios
 <p>FCC ID: U4GJTAWB IC: 3862E-JTAWB HVIN: JTAWB HH</p>	 <p>FCC ID: U4GJTAWB IC: 3862E-JTAWB HVIN: JTAWB GUN</p>

FCC Compliance

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE:

This device is restricted to indoor use when operated in the 5.15 to 5.25 GHz frequency range. Changes or modifications made to this equipment not expressly approved by Datalogic S.r.l. may void the FCC authorization to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED Compliance

NOTICE:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAUTION:

- (i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

AVERTISSEMENT:

- (i) les dispositifs fonctionnant dans la bande 5 150-5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- (ii) les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5 250-5 350 MHz et 5 650-5 850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Radiofrequency Radiation Exposure Information

This device was tested for handheld and body-worn conditions, according to international Standards covering human exposure to electromagnetic fields from radio devices.

More information about the relevant Standards for SAR measurement methods and procedures may be found in the CE DoC included in the product user manual available at www.datalogic.com website and at the FCC public listing www.fcc.gov under the FCC IDs specified in the FCC/IC labeling section.

Europe

This device is compliant with SAR limits for general population/uncontrolled exposure specified in Council Recommendation 1999/519/EC Annex II.

US and Canada

For body worn operation, this device has been tested and meets the FCC/ISED RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 0 cm from the body. Use of other enhancements may not ensure compliance with FCC/ISED RF exposure guidelines.

Cet équipement peut être installé et utilisé à une distance minimale de 0 cm entre le radiateur et votre corps.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter, expect those approved under the filing.

WEEE Compliance



Information for the user

At the end of its useful life, the product marked with the crossed out wheeled wastebin must be disposed of separately from urban waste.

For more detailed information about disposal, contact the supplier that provided you with the product in question or consult the dedicated section at the website <http://www.datalogic.com>.

Informazione per gli utenti

L'apparecchiatura che riporta il simbolo del bidone barrato deve essere smaltita, alla fine della sua vita utile, separatamente dai rifiuti urbani.

Per maggiori dettagli sulle modalità di smaltimento, contattare il Fornitore dal quale è stata acquistata l'apparecchiatura o consultare la sezione dedicata sul sito <http://www.datalogic.com>.

Information aux utilisateurs

Au terme de sa vie utile, le produit qui porte le symbole d'un caisson à ordures barré ne doit pas être éliminé avec les déchets urbains.

Pour obtenir des informations complémentaires concernant l'élimination, veuillez contacter le fournisseur auprès duquel vous avez acheté le produit ou consulter la section consacrée au site Web <http://www.datalogic.com>.

Información para el usuario

Al final de su vida útil, el producto marcado con un símbolo de contenedor de basura móvil tachado no debe eliminarse junto a los desechos urbanos.

Para obtener una información más detallada sobre la eliminación, por favor, póngase en contacto con el proveedor donde lo compró o consultar la sección dedicada en el Web site <http://www.datalogic.com>.

Benutzerinformation bezüglich


Am Ende des Gerätelebenszyklus darf das Produkt nicht über den städtischen Hausmüll entsorgt werden. Eine entsprechende Mülltrennung ist erforderlich.

Weitere Informationen zu dieser Richtlinie erhalten sie von ihrem Lieferanten über den sie das Produkt erworben haben, oder besuchen sie unsere Homepage unter <http://www.datalogic.com>.



Support Through the Website

Datalogic provides several services as well as technical support through its website. Log on to www.datalogic.com.

For quick access, from the home page click on the search icon , and type in the name of the product you're looking for. This allows you access to download Data Sheets, Manuals, Software & Utilities, and Drawings.

Hover over the Support & Service menu for access to Services and Technical Support.

Reference Documentation

For further information regarding Joya Touch A6 refer to the SDK Help on-line, downloadable from our developer portal: <https://developer.datalogic.com/mobile-computers>.

Warranty Terms and Conditions

The warranty period is 1 year for the device and 90 days for consumables (e.g. battery, power supply, cable etc.) from date of purchase at our company.

NOTES



Glossary

Access Point

A networking hardware device that allows a Wi-Fi device to connect to a wired network. The AP usually connects to a router (via a wired network) as a standalone device, but it can also be an integral component of the router itself. An AP is differentiated from a hotspot, which is the physical location where Wi-Fi access to a WLAN is available.

ASCII

American Standard Code for Information Interchange. A 7 bit-plus-parity code representing 128 letters, numerals, punctuation marks and control characters. It is a standard data transmission code in the U.S.

Barcode

A pattern of variable-width bars and spaces which represents numeric or alphanumeric data in binary form. The general format of a barcode symbol consists of a leading margin, start character, data or message character, check character (if any), stop character, and trailing margin. Within this framework, each recognizable symbology uses its own unique format.

Bit

Binary digit. One bit is the basic unit of binary information. Generally, eight consecutive bits compose one byte of data. The pattern of 0 and 1 values within the byte determines its meaning.

Bluetooth@

A standard radio technology using a proprietary protocol. The onboard Bluetooth@ module in the device is compatible with the 2.1 protocol with Enhanced Data Rate (EDR).

Boot

The process a computer goes through when it starts. During boot, the computer can run self-diagnostic tests and configure hardware and software.

Byte

On an addressable boundary, eight adjacent binary digits (0 and 1) combined in a pattern to represent a specific character or numeric value. Bits are numbered from the right, 0 through 7, with bit 0 the low-order bit. One byte in memory can be used to store one ASCII character.

CDRH

Center for Devices and Radiological Health. A federal agency responsible for regulating laser product safety. This agency specifies various laser operation classes based on power output during operation.

Character

A pattern of bars and spaces which either directly represents data or indicates a control function, such as a number, letter, punctuation mark, or communications control contained in a message.

Decode

To recognize a barcode symbology (e.g., Codabar, Code 128, Code 3 of 9, UPC/EAN, etc.) and convert the content of the barcode scanned from a visual pattern into electronic data.

Density (Barcode Density)

The number of characters represented per unit of measurement (e.g., characters per inch).

Depth of Field (DOF)

The portion of a scene that appears acceptably sharp in the image. Although a lens can precisely focus at only one distance, the decrease in sharpness is gradual on each side of the focused distance, so that within the DOF, the unsharpness is imperceptible under normal viewing conditions.

Dock

A dock is used for charging the terminal battery and for communicating with a host computer, and provides a storage place for the terminal when not in use.

Firmware

A software program or set of instructions programmed on a hardware device. It provides the necessary instructions for how the device communicates with the other computer hardware. Firmware is typically stored in the flash ROM of a hardware device. While ROM is "read-only memory," flash ROM can be erased and rewritten because it is actually a type of flash memory.

Flash Memory

Non-volatile memory for storing application and configuration files.

Host

A computer that serves other mobile computers in a network, providing services such as network control, database access, special programs, supervisory programs, or programming languages.

IEEE 802.11

A set of standards carrying out wireless local area network (WLAN) computer communication in the 2.4, 3.6 and 5 GHz frequency bands. They are created and maintained by the IEEE LAN/MAN Standards Committee.

IP

Internet Protocol. The IP part of the TCP/IP communications protocol. IP implements the network layer (layer 3) of the protocol, which contains a network address and is used to route a message to a different network or subnetwork. IP accepts 'packets' from the layer 4 transport protocol (TCP or UDP), adds its own header to it and delivers a 'datagram' to the layer 2 data link protocol. It may also break the packet into fragments to support the maximum transmission unit (MTU) of the network.

IP Address

(Internet Protocol address) The address of a computer attached to an IP network. Every client and server station must have a unique IP address. A 32-bit address used by a computer on a IP network. Client workstations have either a permanent address or one that is dynamically assigned to them each session. IP addresses are written as four sets of numbers separated by periods; for example, 204.171.64.2.

Laser

Light Amplification by Stimulated Emission of Radiation. The laser is an intense light source. Light from a laser is all the same frequency, unlike the output of an incandescent bulb. Laser light is typically coherent and has a high energy density.

Laser Diode

A gallium-arsenide semiconductor type of laser connected to a power source to generate a laser beam. This laser type is a compact source of coherent light.

Light Emitting Diode (LED)

A low power electronic light source commonly used as an indicator light. It uses less power than an incandescent light bulb but more than a Liquid Crystal Display (LCD).

Liquid Crystal Display (LCD)

A display that uses liquid crystal sealed between two glass plates. The crystals are excited by precise electrical charges, causing them to reflect light outside according to their bias. They use little electricity and react relatively quickly. They require external light to reflect their information to the user.

MIL

1 mil = 1 thousandth of an inch.

Parameter

A variable that can have different values assigned to it.

RAM

Random Access memory. Data in RAM can be accessed in random order, and quickly written and read.

Resolution

The narrowest element dimension which is distinguished by a particular reading device or printed with a particular device or method.

RF

Radio Frequency.

Scanner

An electronic device used to scan barcode symbols and produce a digitized pattern that corresponds to the bars and spaces of the symbol. Its three main components are:

- Light source (laser or photoelectric cell) - illuminates a barcode.
- Photodetector - registers the difference in reflected light (more light reflected from spaces).
- Signal conditioning circuit - transforms optical detector output into a digitized bar pattern.

SDK

Software Development Kit.

Symbol

A scannable unit that encodes data within the conventions of a certain symbology, usually including start/stop characters, quiet zones, data characters and check characters.

Symbology

The structural rules and conventions for representing data within a particular barcode type (e.g. UPC/EAN, Code 39, PDF417, etc.).

USB

Universal Serial Bus. Type of serial bus that allows peripheral devices (disks, modems, printers, digitizers, data gloves, etc.) to be easily connected to a computer. A 'plug-and-play' interface, it allows a device to be added without an adapter card and without rebooting the computer (the latter is known as hot-plugging). The USB standard, developed by several major computer and

telecommunications companies, supports data-transfer speeds up to 12 megabits per second, multiple data streams, and up to 127 peripherals.

Voice over IP (VOIP)

Voice over Internet Protocol (also voice over IP, VoIP or IP telephony) is a methodology and group of technologies for the delivery of voice communications and multimedia sessions over Internet Protocol (IP) networks, such as the Internet. The terms Internet telephony, broadband telephony, and broadband phone service specifically refer to the provisioning of communications services (voice, fax, SMS, voice-messaging) over the public Internet, rather than via the public switched telephone network (PSTN).

WLAN

A Wireless Local Area Network links devices via a wireless distribution method (typically spread-spectrum or OFDM radio), and usually provides a connection through an access point to the wider internet. This gives users the mobility to move around within a local coverage area and still be connected to the network.

WPAN

A Wireless Personal Area Network is a personal area network - a network for interconnecting devices centered around an individual person's workspace - in which the connections are wireless. Typically, a wireless personal area network uses some technology that permits communication within about 10 meters - in other words, a very short range.



www.datalogic.com

©2019 Datalogic S.p.A. and/or its affiliates. All rights reserved. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.

Datalogic S.r.l.

Via S. Vitalino, 13 | Lippo di Calderara di Reno

BO 40012 | Italy

Telephone: (+39) 051-3147011 | Fax: (+39) 051-3147205



822002501

(Rev. B)

June 2019